

VMS (Video Management System)

User Manual for Mac

Version: 8.1.24.5


 
Table of Contents


Table of Contents	2
1 Installation.....	4
2 VMS usage and operating instructions.....	5
2.1 server and operating instructions	5
2.1.1 Login	5
2.1.2 Adding a hardware device.....	7
2.1.2.1 Adding scanning equipment.....	9
2.1.2.1.1 specified IP range scanning hardware.....	9
2.1.2.1.2 specify scanning hardware manufacturers	9
2.1.2.1.3 Configuring automatic verification.....	10
2.1.2.1.4 Start Depending on how the search appliance	11
2.1.2.1.5 Manual Verification hardware.....	11
2.1.2.1.6 Completing the Add Hardware.....	12
2.1.2.2 Manually Add Device.....	13
2.1.2.2.1 IP address is added hardware	13
2.1.2.2.2 Adding hardware serial number.....	13
2.1.2.3 edit device properties	14
2.1.2.3.1 modify the hardware device name	17
2.1.2.3.2 modify the hardware device port number, user name and password	18
2.1.2.3.3 Modify the channel name	18
2.1.3 Storage Configuration	20
2.1.3.1 configure the storage path, stream type, retention time	21
2.1.3.2 configure the recording type, time change	22
2.1.3.3 Configuration Template.....	22
2.1.4 Server Access.....	23
2.1.5 User Management.....	24
2.1.5.1 Edit User Information	24
2.1.5.2 Edit User Permissions.....	24
2.1.6 Service	25
2.2 client and operating instructions	26
2.2.1 Login	26
2.2.2 Live Preview.....	27
2.2.2.1 Live Preview Features.....	28
2.2.2.2 View switching video.....	28

2.2.2.3 Select a camera preview video.....	29
2.2.2.4 PTZ control	29
2.2.2.5 Video Window Toolbar Function.....	30
2.2.2.6 View polling.....	31
2.2.2.7 Full Screen	31
2.2.3 Playback.....	32
2.2.3.1 Playback Interface Features	32
2.2.3.2 platform video playback.....	33
2.2.3.2.1 switch views video playback.....	33
2.2.3.2.2 The limiting choose camera video playback.....	33
2.2.3.2.3 Video Search.....	34
2.2.3.2.4 video playback.....	34
2.2.3.2.4.1 synchronous playback	34
2.2.3.2.4.2 independent playback.....	35
2.2.3.2.4.3 loop playback	36
2.2.3.3 Export Video Platform.....	36
2.2.3.4 Device Playback.....	39
2.2.3.4.1 Select playback video camera	40
2.2.3.4.2 Video Search.....	40
2.2.3.4.3 video playback.....	41
2.2.3.5 Export recording equipment	42
2.2.4 Management function.....	42
2.2.4.1 Export List.....	42
2.2.4.2 View Settings	43
2.2.4.2.1 View Editor	43
2.2.4.2.1.1 New View	43
2.2.4.2.1.2 view content editor	44
2.2.4.2.1.3 Modify the view name	47
2.2.4.2.1.4 Delete View	47
2.2.4.2.1.5 Set View polling.....	48
2.2.4.2.1.6 Save Edit	48
2.2.4.3 System parameter settings.....	49
2.2.5 Logout.....	50

1 Installation

  VMS consists of two parts, VMS VMS server and client, you can choose to install VMS VMS server and client installed on the same computer, can also be installed separately on different local computer, select the default full installation.

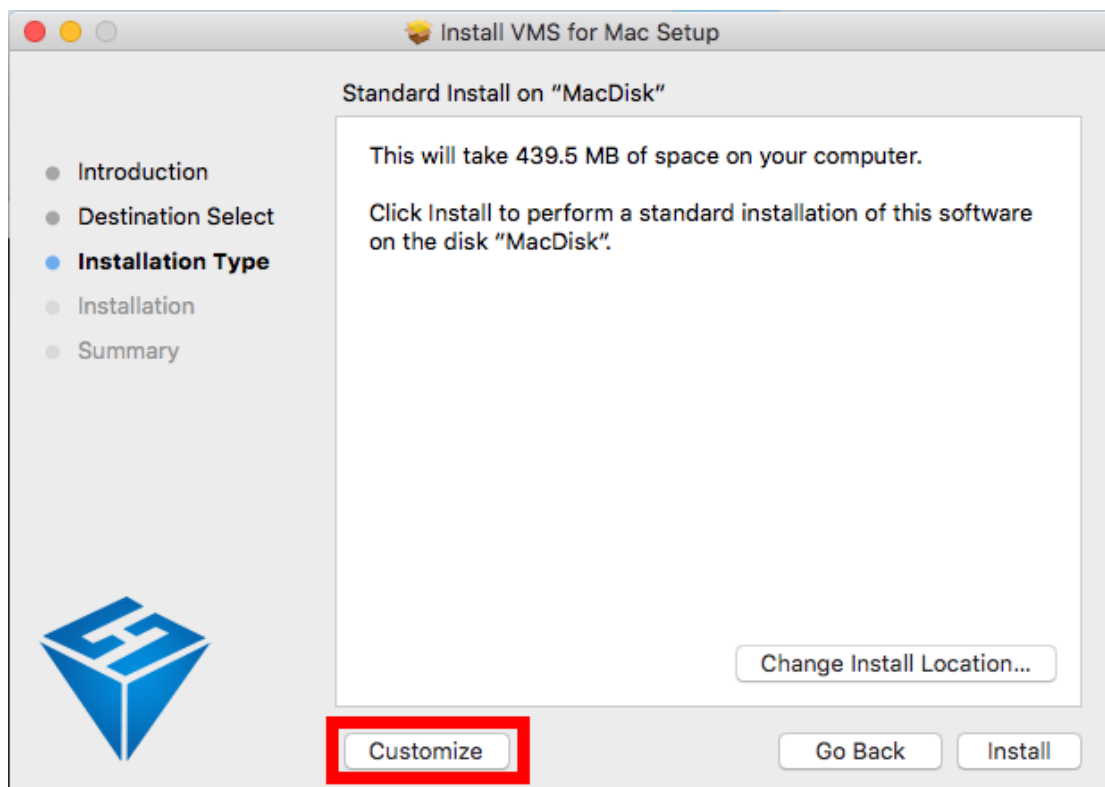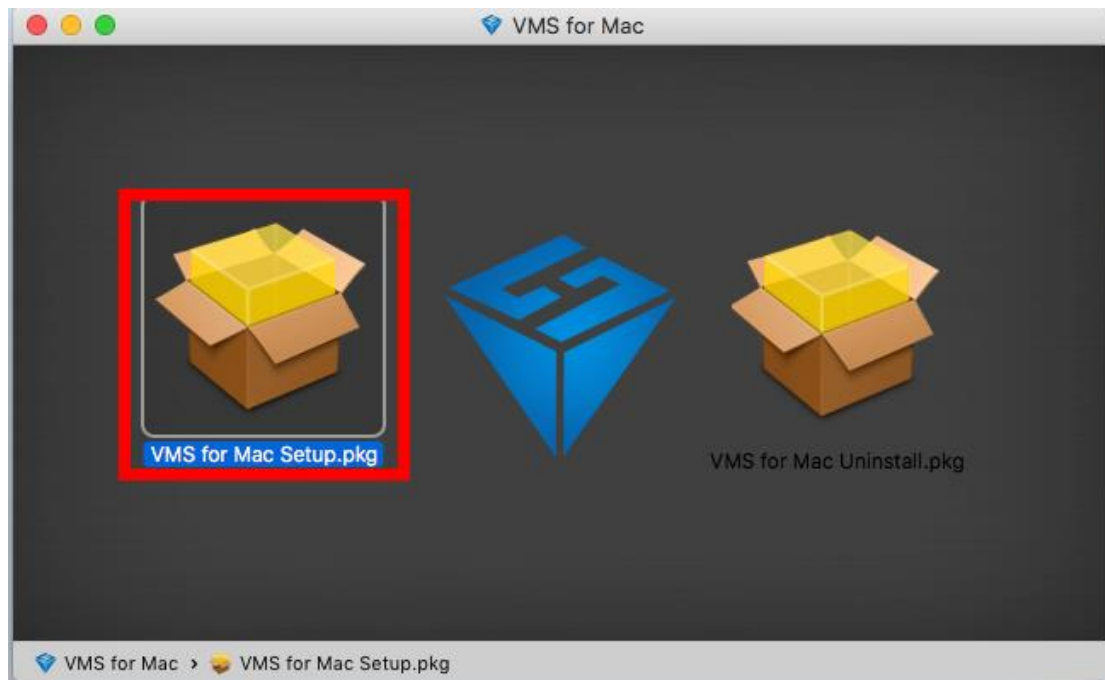

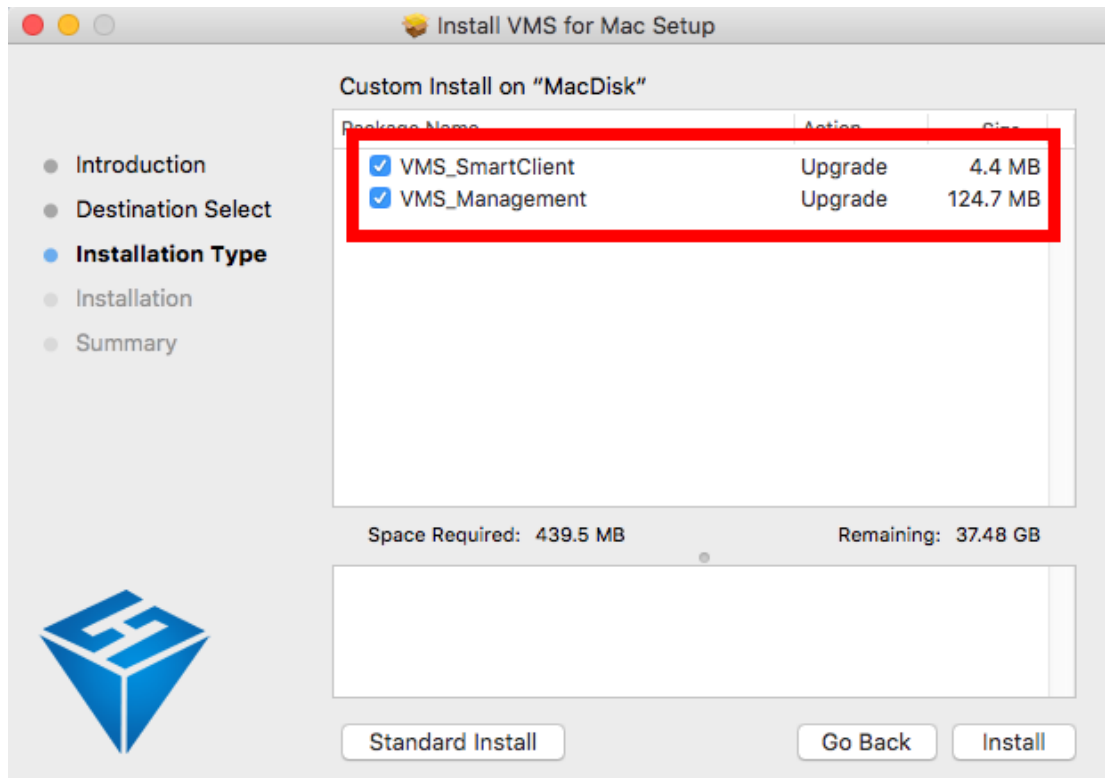


2 VMS usage and operating instructions


2.1 server and operating instructions

2.1.1 Login

 
Double click this logo on your Applications

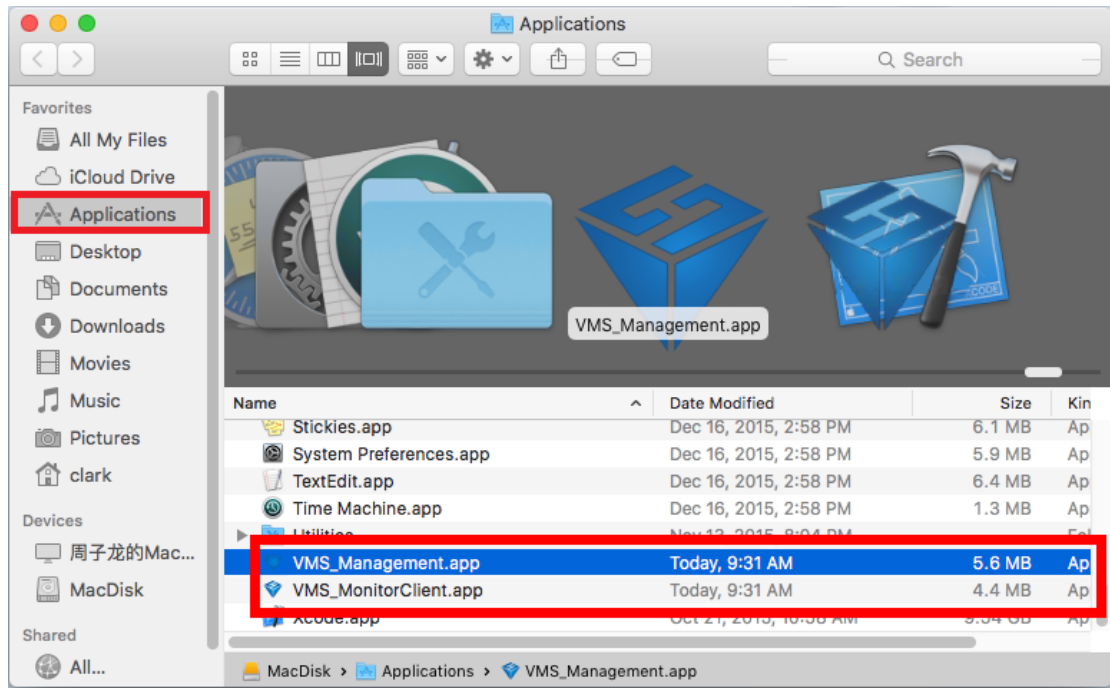

 
start the server management program, start interface as the first use of VMS Management program, you need to create a superuser

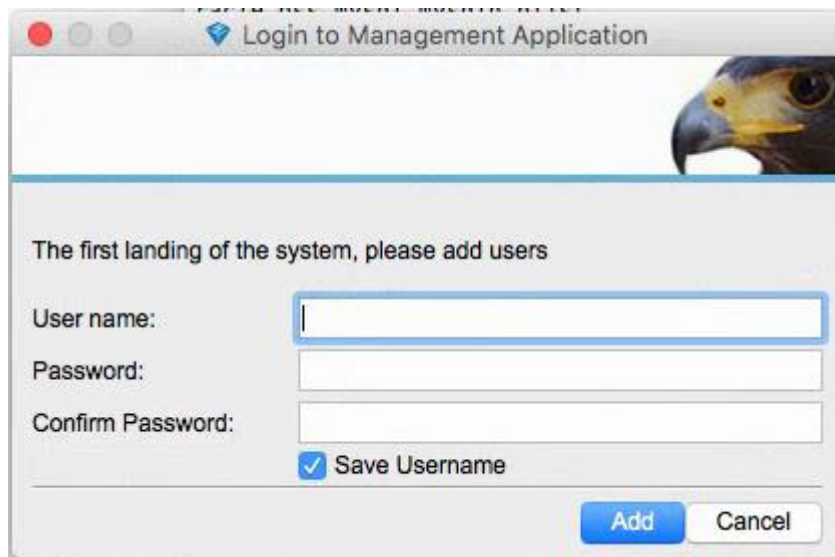

 Use super-user or administrator user login VMS Management

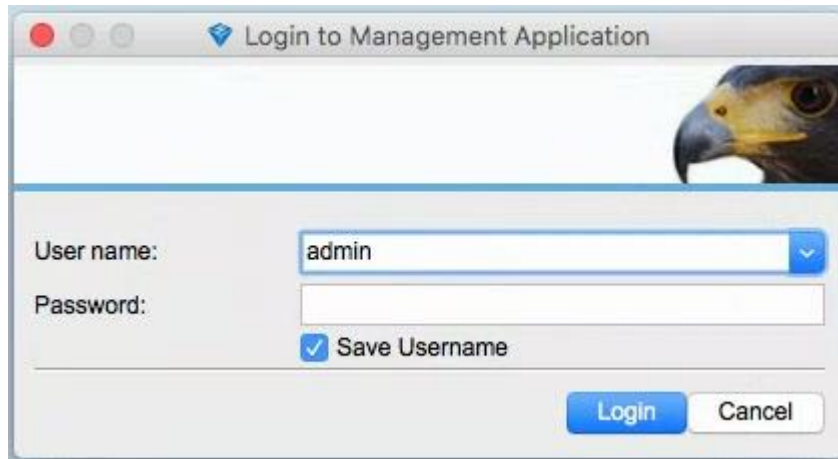


 Successful landing into the management end of the main VMS Management Interface

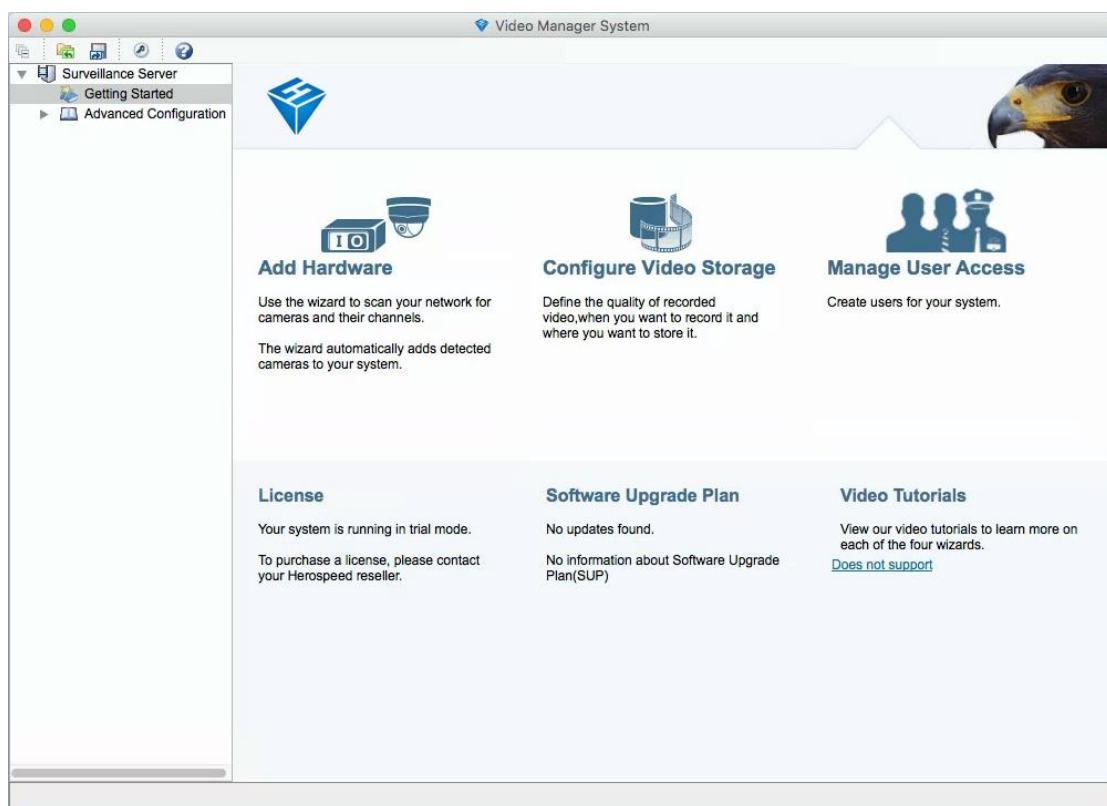


2.1.2 Adding a hardware device

 Click the entry, click Add Hardware

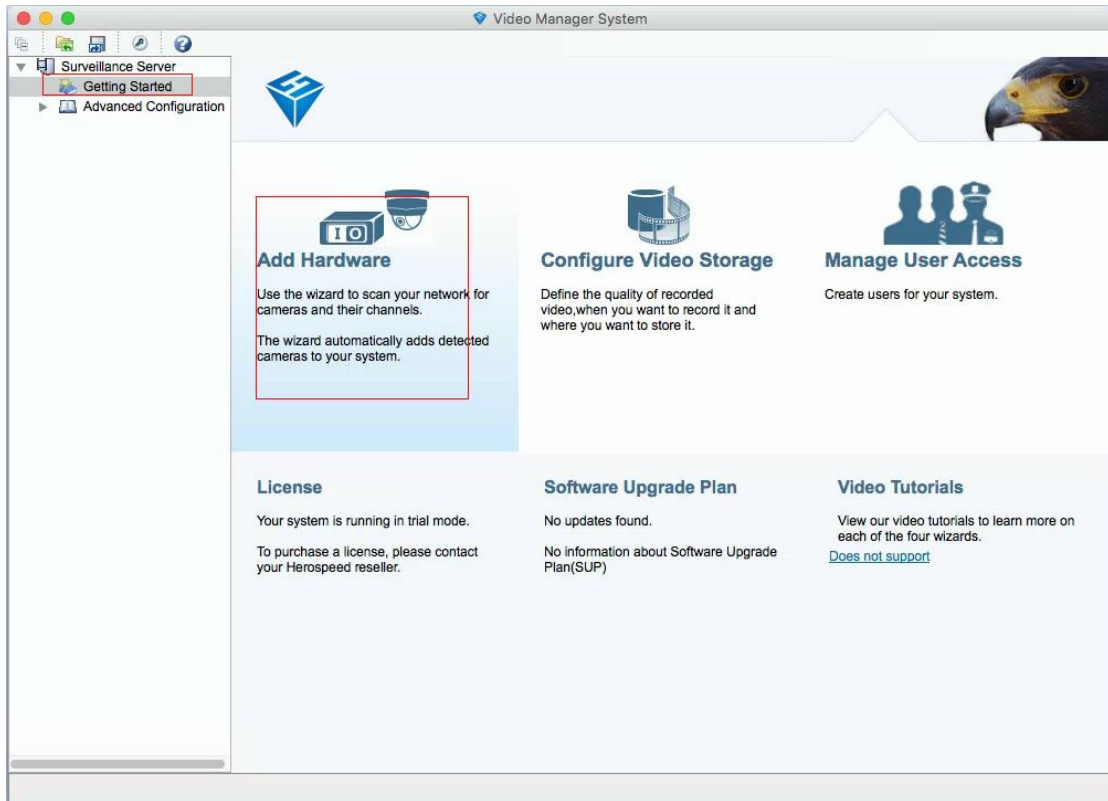

 Pop-up dialog box to add add hardware, hardware scans can scan directly inside the LAN hardware device, you can also scan the specified network hardware; manually add the hardware is added directly to know the address or the serial number of hardware devices.

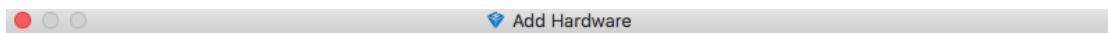

How do you want to add new hardware?

 
Scan for hardware

XProtect will Scan your network for available hardware. You can extend the scan to include other networks. When the scan is complete, select which hardware you want to add.

Manually specify the hardware to add


Use this option if you know the IP addresses of the hardware you want to add. You can either type the IP addresses manually or import them from a comma-separated values (CSV) file.

2.1.2.1 Adding scanning equipment

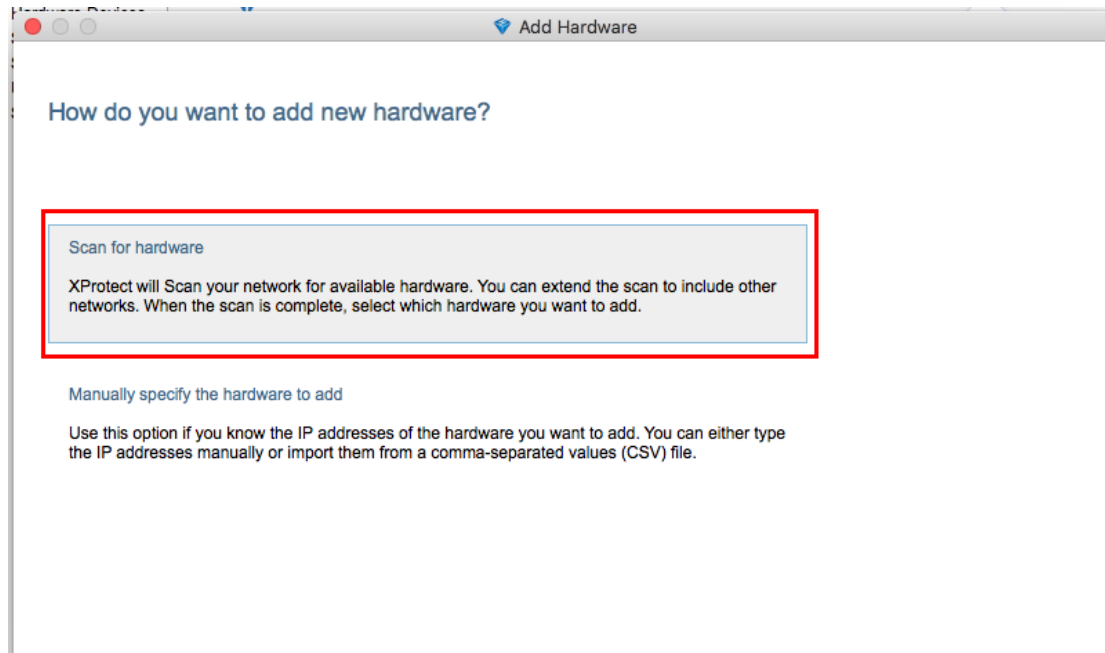

2.1.2.1.1 specified IP range scanning hardware

 
IP range can be set to filter search equipment, if you do not specify IP range can click Next to skip.

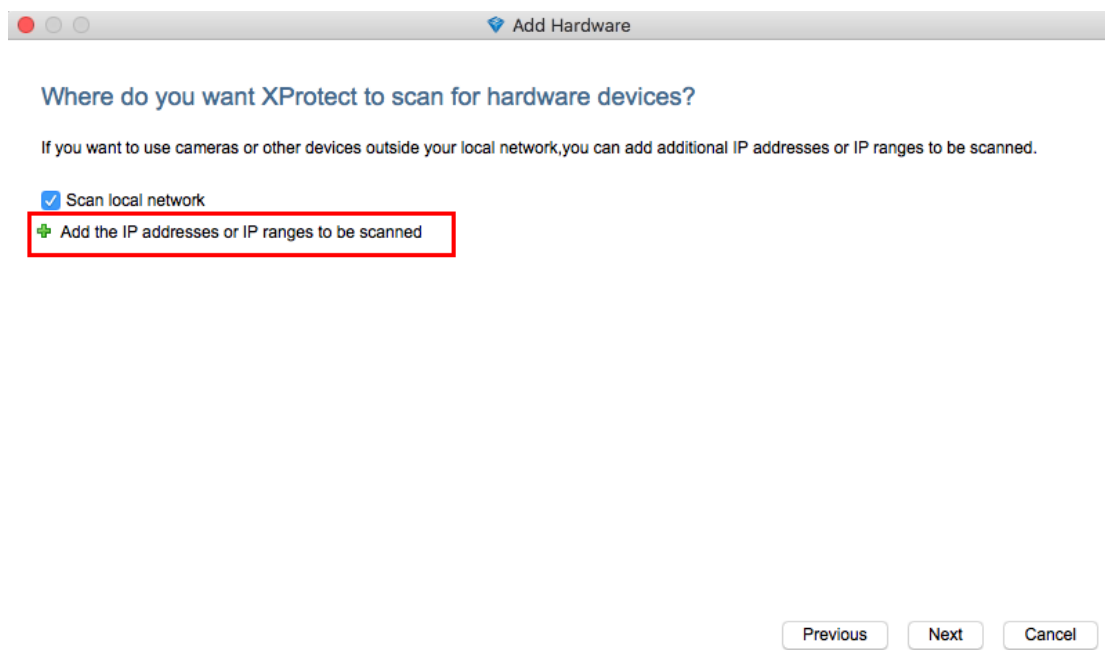

2.1.2.1.2 specify scanning hardware manufacturers


Can be set to search for equipment manufacturers, if you do not specify manufacturers can click

 Next to skip the default search All manufacturers

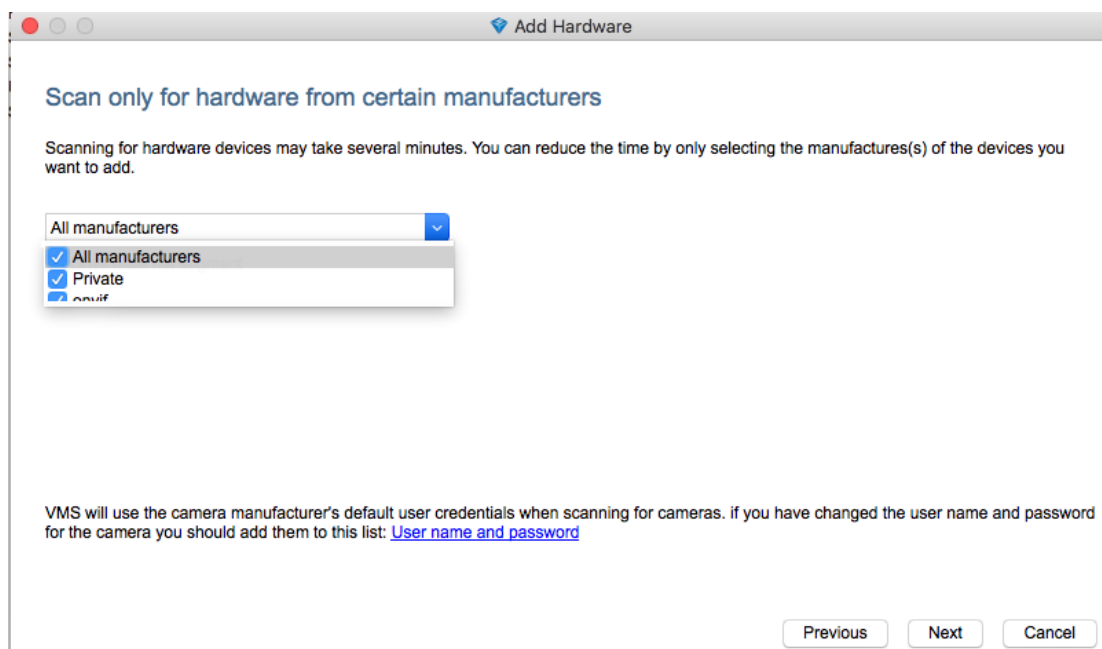


2.1.2.1.3 Configuring automatic verification

 Add the default user name and password, and automatically verify scanned hardware devices (no need to configure automatic verification directly to the next step)

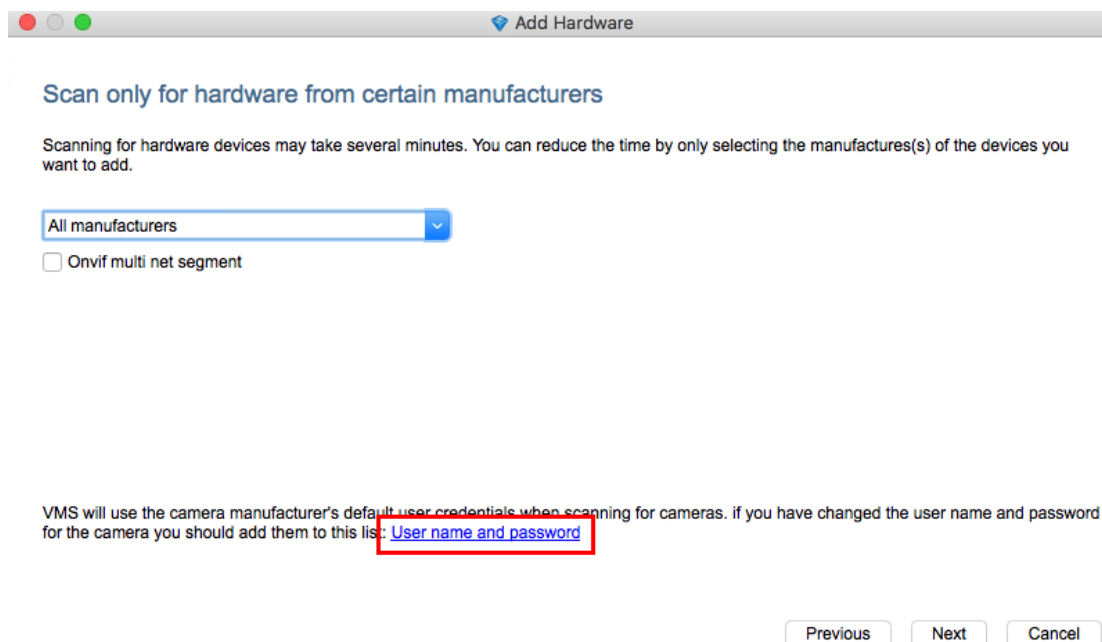


 Pop-up dialog box to add a user name and password

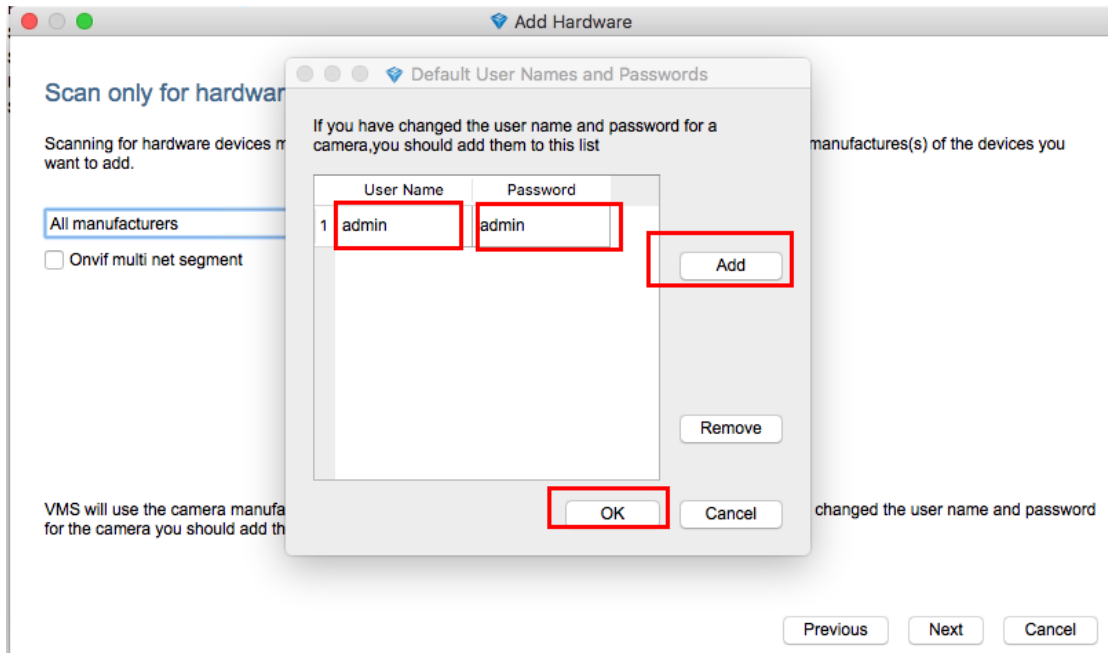


2.1.2.1.4 Start Depending on how the search appliance

 Click Next.

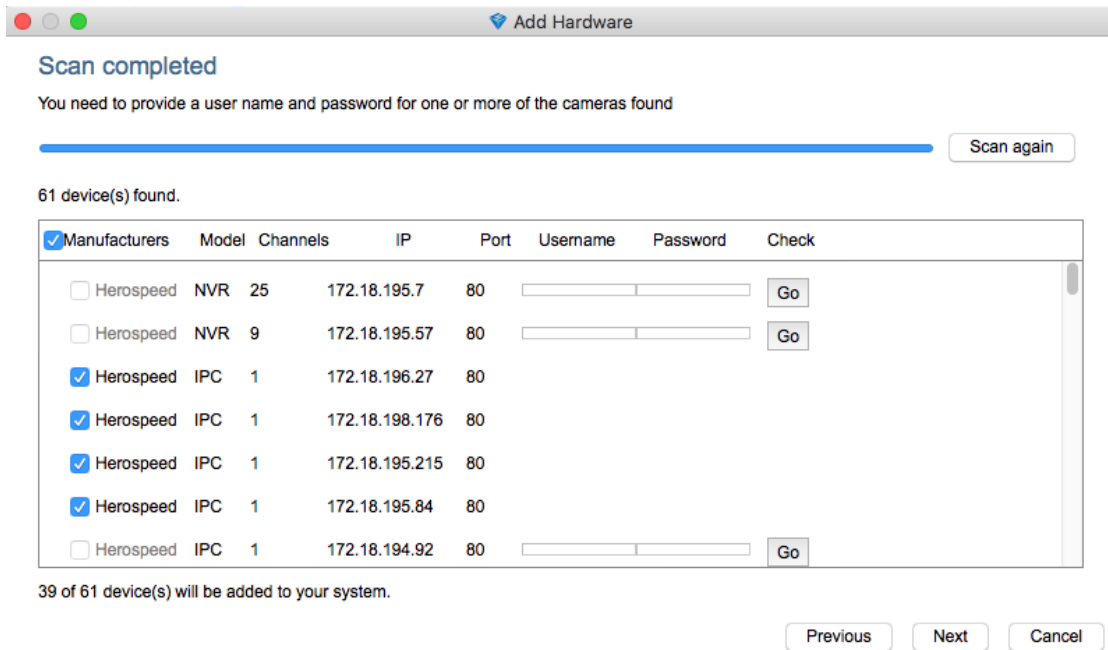


2.1.2.1.5 Manual Verification hardware

 Hardware manually enter your username and password click Start

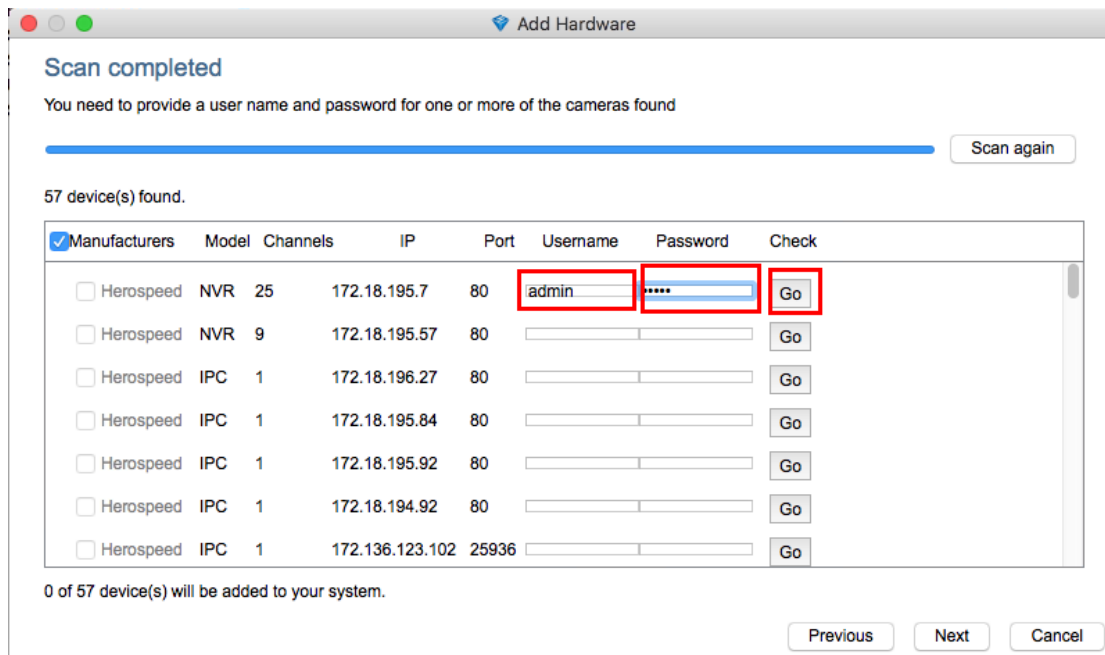


2.1.2.1.6 Completing the Add Hardware

 Select the desired device, then click Next to complete the search for new ways of equipment, software can add up to 64 channels

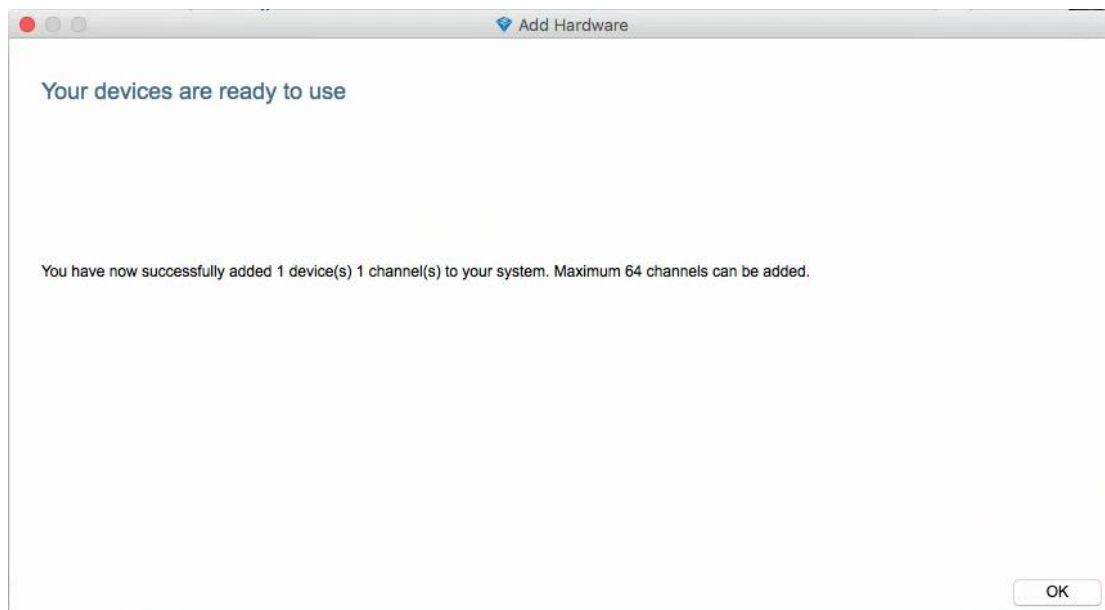


 2.1.2.2 Manually Add Device

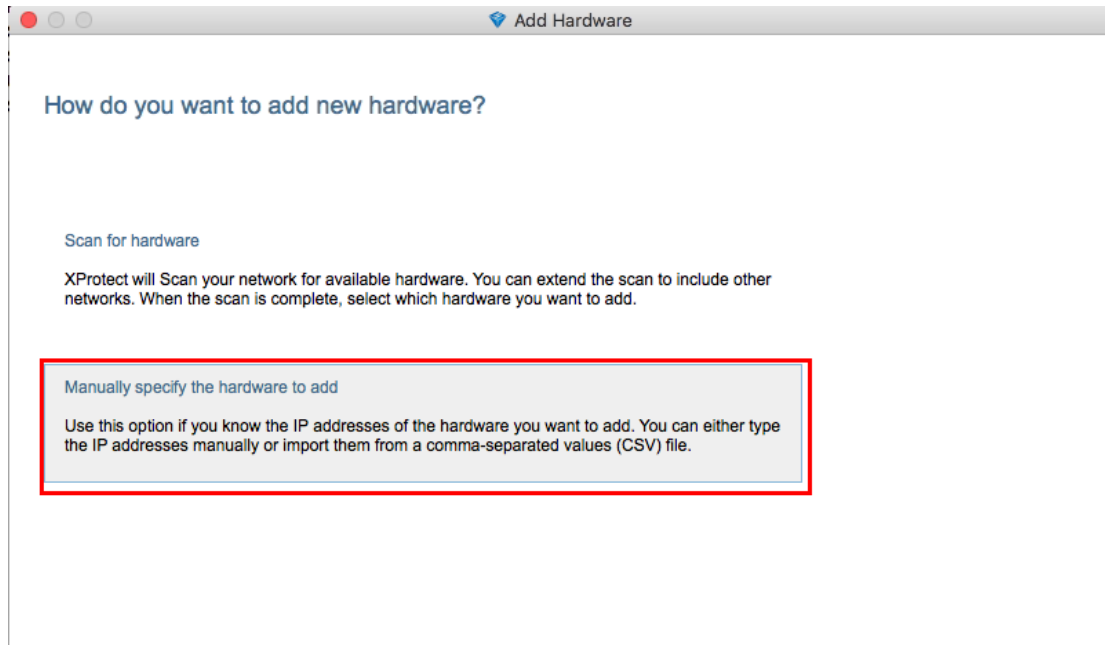

2.1.2.2.1 IP address is added hardware

 Enter the IP or domain name, port number, user name, password, and the number of channels to choose the type of new equipment Driver

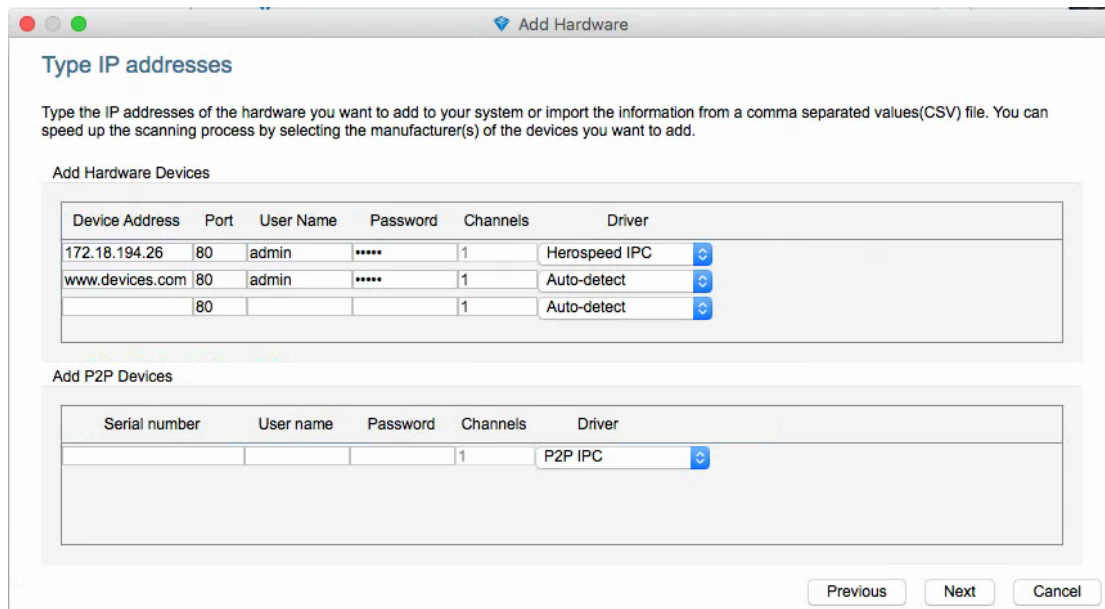

2.1.2.2.2 Adding hardware serial number

Input Devices SN code to add P2P device

Add Hardware

Type IP addresses

Type the IP addresses of the hardware you want to add to your system or import the information from a comma separated values(CSV) file. You can speed up the scanning process by selecting the manufacturer(s) of the devices you want to add.

Add Hardware Devices

Device Address	Port	User Name	Password	Channels	Driver
	80			1	Auto-detect

Add P2P Devices

Serial number	User name	Password	Channels	Driver
11111111111111	admin	*****	1	P2P IPC
			1	P2P IPC

Previous Next Cancel

Completed manually add devices, software can add up to 64 channels.

Add Hardware

Your devices are ready to use

You have now successfully added 1 device(s) 1 channel(s) to your system. Maximum 64 channels can be added.

OK

2.1.2.3 edit device properties

As shown below, click on the "1", double-click the "2"

Video Manager System

Surveillance Server
Getting Started
Advanced Configuration
Hardware Devices


Hardware Device Summary:

Hardware Device Name	License	Video Channels	Address	WWW	Port	Device Driver
172.18.197.85	Trial	1	172.18.197.85		80	Herospeed
172.18.198.124	Trial	1	172.18.198.124		80	Herospeed
172.18.198.7	Trial	1	172.18.198.7		80	Herospeed
172.18.199.108	Trial	1	172.18.199.108		80	Herospeed
172.18.199.104	Trial	1	172.18.199.104		80	Herospeed
172.18.193.13	Trial	1	172.18.193.13		80	Herospeed
172.18.195.211	Trial	1	172.18.195.211		80	Herospeed
172.18.197.119	Trial	1	172.18.197.119		80	Herospeed
172.18.197.14	Trial	1	172.18.197.14		80	Herospeed
172.18.197.152	Trial	1	172.18.197.152		80	Herospeed
172.18.196.84	Trial	1	172.18.196.84		8...	Herospeed
172.18.197.72	Trial	1	172.18.197.72		80	Herospeed
172.18.197.19	Trial	1	172.18.197.19		80	Herospeed
172.18.197.33	Trial	1	172.18.197.33		80	Herospeed
172.18.199.103	Trial	1	172.18.199.103		80	Herospeed
172.18.197.30	Trial	1	172.18.197.30		80	Herospeed
172.18.197.114	Trial	1	172.18.197.114		80	Herospeed
172.18.199.10	Trial	1	172.18.199.10		80	Herospeed
172.18.196.25	Trial	1	172.18.196.25		80	Herospeed
172.18.194.25	Trial	1	172.18.194.25		80	Herospeed
172.18.196.53	Trial	1	172.18.196.53		80	Herospeed
172.18.196.29	Trial	1	172.18.196.29		80	Herospeed
172.18.195.20	Trial	1	172.18.195.20		80	Herospeed
172.18.197.118	Trial	1	172.18.197.118		80	Herospeed
172.18.197.73	Trial	1	172.18.197.73		80	Herospeed
172.18.197.70	Trial	1	172.18.197.70		80	Herospeed
172.18.199.87	Trial	1	172.18.199.87		80	ONVIF

There are 35 device 35 channel

Eject Hardware Properties dialog box

Hardware Properties



Name and Video Channels
Network, Device Type and License


Hardware name and video channels

Hardware name:


Enable	Camera
<input checked="" type="checkbox"/>	Camera 1

OK Cancel

 2.1.2.3.1 modify the hardware device name

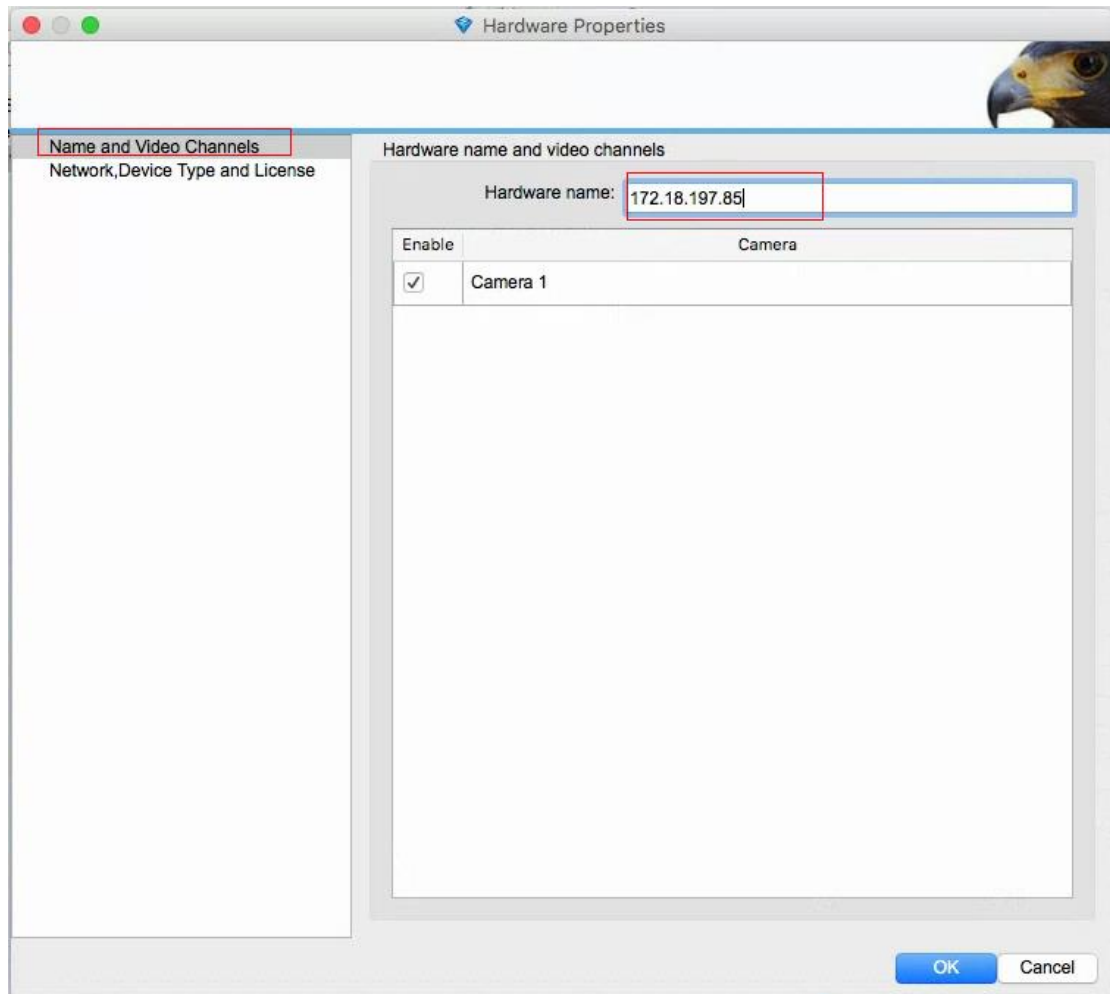

 2.1.2.3.2 modify the hardware device port number, user name and password

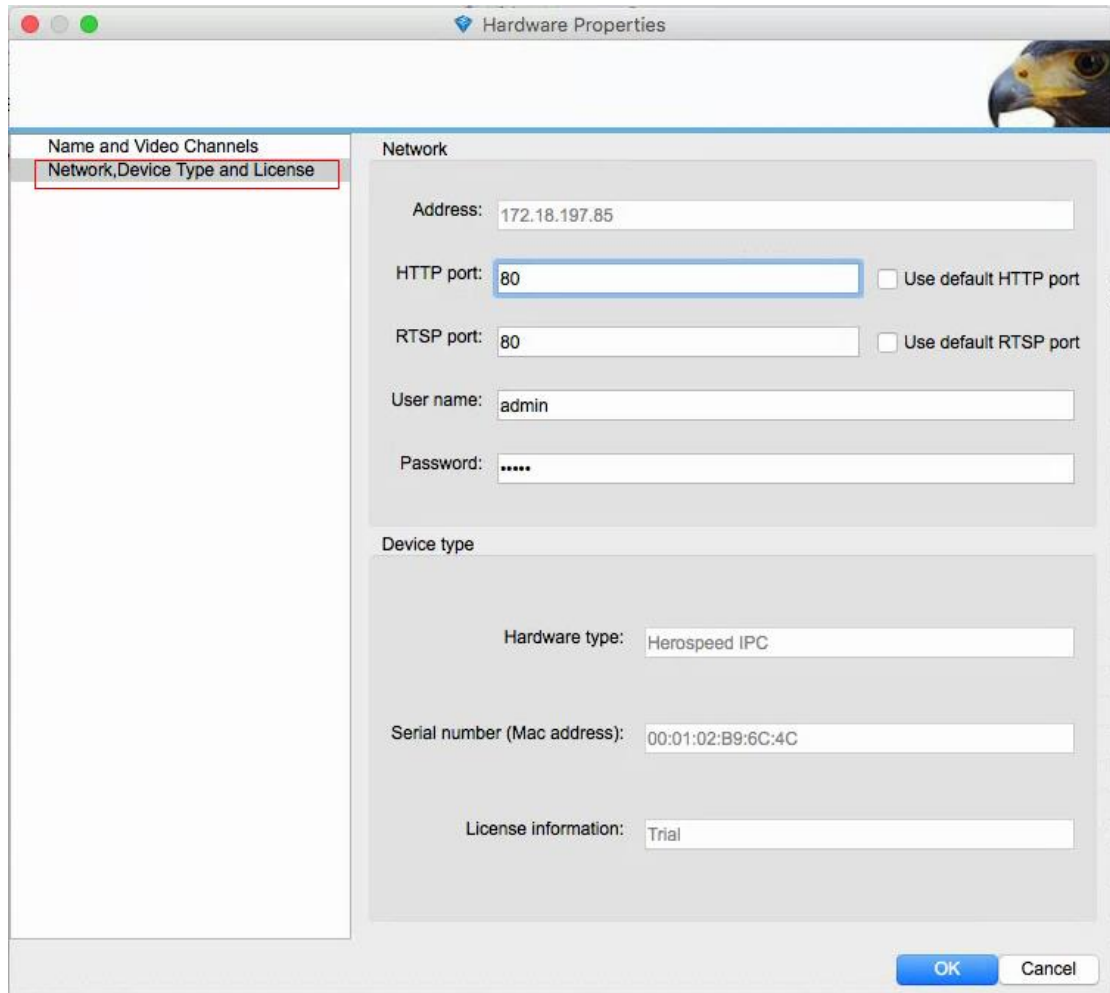

The screenshot shows a window titled "Hardware Properties" with a sidebar on the left containing two tabs: "Name and Video Channels" and "Network, Device Type and License". The "Network, Device Type and License" tab is selected and highlighted with a red border. The main area of the window is divided into two sections: "Network" and "Device type".

Network section:

- Address: 172.18.197.85
- HTTP port: 80 (highlighted with a blue border) Use default HTTP port
- RTSP port: 80 Use default RTSP port
- User name: admin
- Password:

 
Device type section:

- Hardware type: Herospeed IPC
- Serial number (Mac address): 00:01:02:B9:6C:4C
- License information: Trial


At the bottom right of the dialog box are "OK" and "Cancel" buttons.

2.1.2.3.3 Modify the channel name

As shown below, click on the "1", double-click the "2".

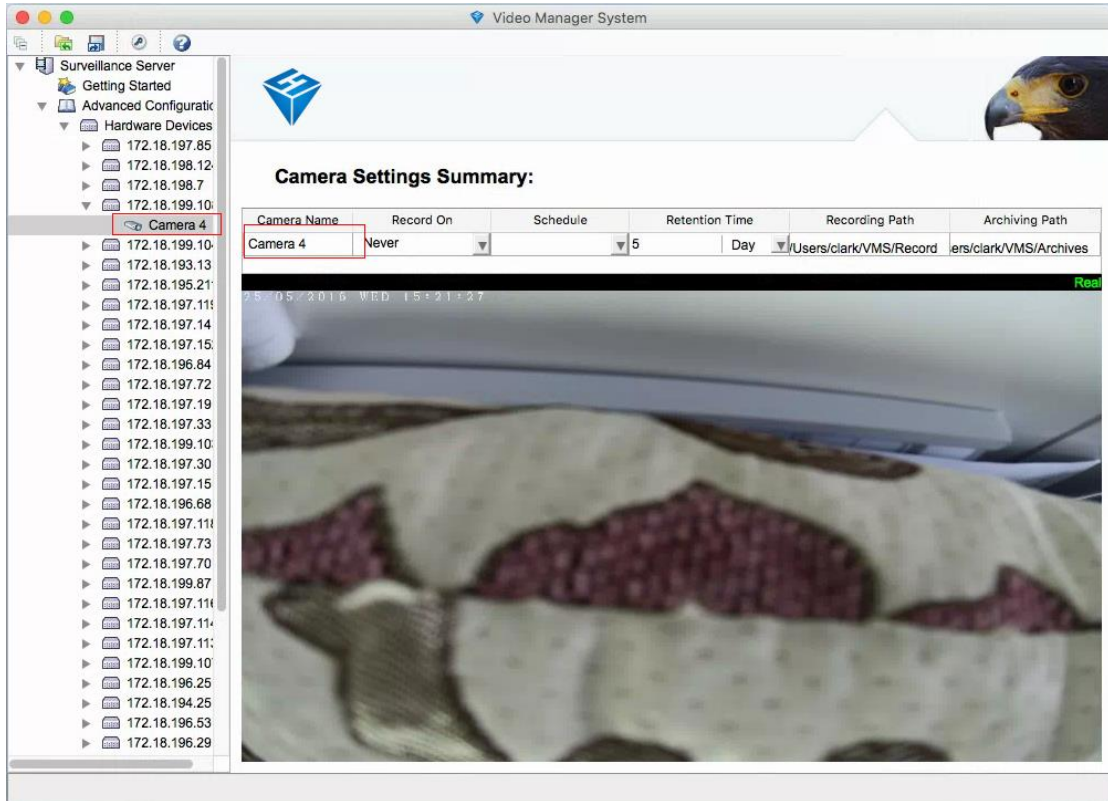

 Open the Properties dialog box to modify the camera

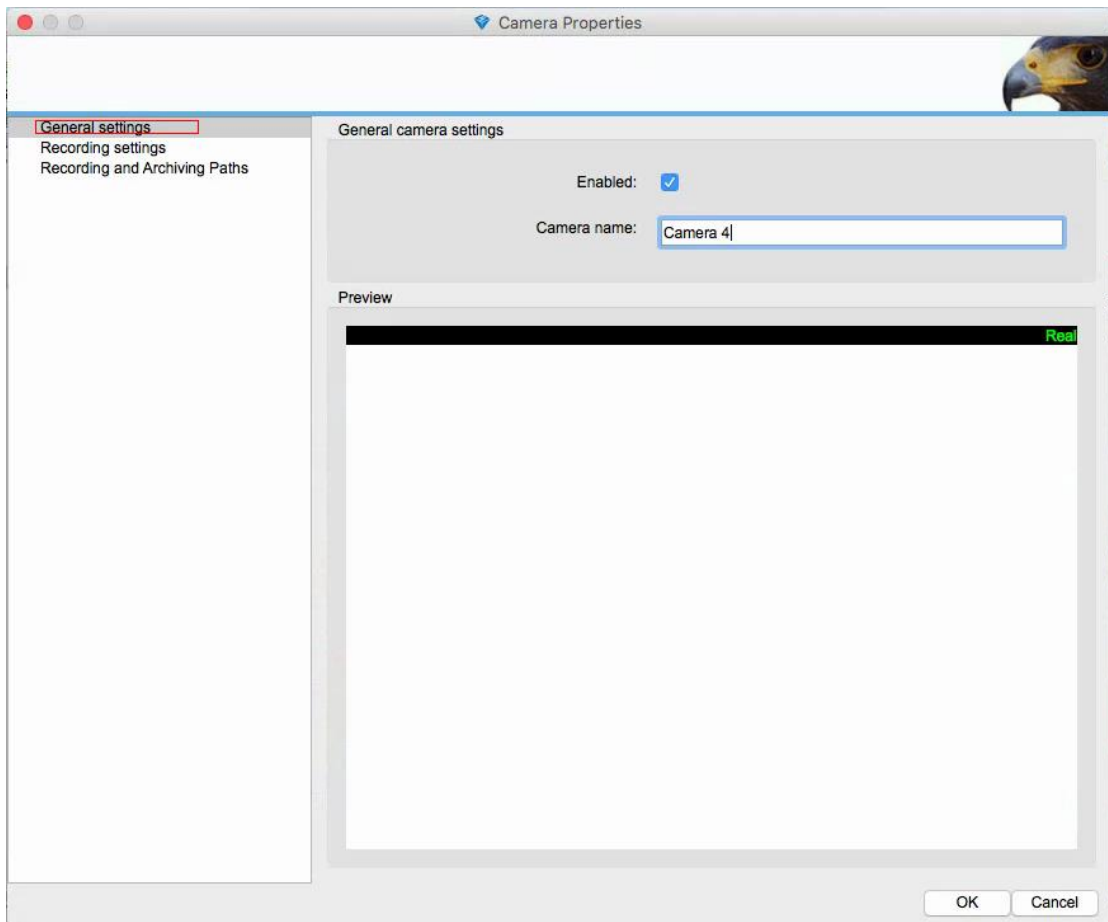

2.1.3 Storage Configuration

Displays storage configuration information for all devices

The screenshot shows the 'Video Manager System' interface. On the left, a navigation tree includes 'Surveillance Server', 'Getting Started', 'Advanced Configuration', 'Hardware Devices', 'Storage Information' (highlighted), 'Server Access', 'Users', and 'Services'. The main content area is titled 'Camera Summary:' and contains a table with the following data:

Camera Name	Record On	Schedule	Retention Time	Recording Path	Archiving Path
Camera 18	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 14	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 26	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 17	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 15	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 23	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 31	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 13	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 8	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 30	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 25	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 20	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 11	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives

Below the table is the 'Storage Usage Summary:' section, which includes a table and a pie chart:

Drive	Path	Drive Size	Other Data	Free Space
MacDisk	/	85 GB	71 GB	14 GB

The pie chart shows a legend with 'Free space' (green) and 'Other space' (red). The 'Archiving Times' section shows a dropdown menu with '15:10:07' and 'Add' and 'Delete' buttons.

At the bottom of the interface, a message states: 'There are 0 channels has been configured to store information'.

Channel storage configuration editor, double-click to the right of the list box into the recording and storage properties, you can only give one camera configuration can also use templates to configure multiple cameras, (using the template configuration see 2.1.3.3).

Video Manager System

Surveillance Server

- Getting Started
- Advanced Configuration
 - Hardware Devices
 - Storage Information
 - Server Access
 - Users
 - Services

Camera Summary:

Camera Name	Record On	Schedule	Retention Time	Recording Path	Archiving Path
Camera 18	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 14	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 26	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 17	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 15	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 23	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 31	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 13	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 8	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 30	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 25	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 20	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives
Camera 11	Never		5 Day	/Users/clark/VMS/Rec...	/Users/clark/VMS/Archives

Storage Usage Summary:

Drive	Path	Drive Size	Other Data	Free Space
MacDisk	/	85 GB	71 GB	14 GB

Legend:

- Free space
- Other space

Archiving Times: 15:10:07

Add Delete

There are 0 channels has been configured to store information

2.1.3.1 configure the storage path, stream type, retention time

Recording and Storage Properties

Recording and Archiving Paths

Video Recording

Storage Information

Recording

Template

	Recording Path	Archiving Path	Recording stream	Retention Time
Template->	/Users/clark/Record	/Users/clark/Archives	Main stream	5 Day


Apply Template	Camera	Recording Path	Archiving Path	Recording stream	Retention Time
<input type="checkbox"/>	Camera 18	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 14	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 26	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 17	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 15	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 23	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 31	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 13	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 8	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 30	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 25	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 20	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 11	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 32	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 19	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 10	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day
<input type="checkbox"/>	Camera 28	/Users/clark/VMS/Record	/Users/clark/VMS/Archives	Main stream	5 Day

Select All Clear All

Set all template values on selected cameras: Set

OK Cancel

 2.1.3.2 configure the recording type, time change

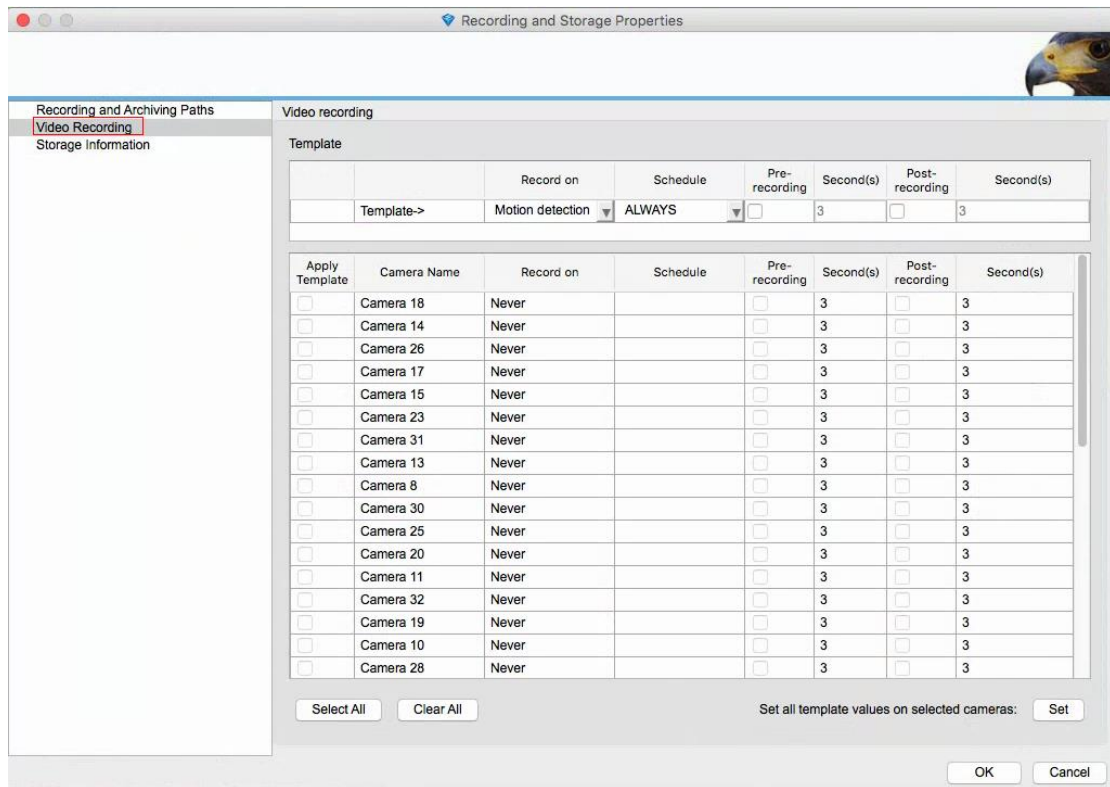

2.1.3.3 Configuration Template

As shown below:

- 1> Edit Template
- 2> Select the template you want to apply the camera
- 3> settings to the camera

Recording and Storage Properties

Recording and Archiving Paths
Video Recording
Storage Information

Video recording

Template

	Record on	Schedule	Pre-recording	Second(s)	Post-recording	Second(s)
Template-> 1	Motion detection	ALWAYS	<input type="checkbox"/>	3	<input type="checkbox"/>	3

Apply Template	Camera Name	Record on	Schedule	Pre-recording	Second(s)	Post-recording	Second(s)
<input type="checkbox"/>	Camera 18	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 14	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 26	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 17	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 15	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 23	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 31	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 13	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 8	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 30	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 25	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 20	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 11	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 32	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 19	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 10	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3
<input type="checkbox"/>	Camera 28	Never		<input type="checkbox"/>	3	<input type="checkbox"/>	3

Select All Clear All

Set all template values on selected cameras: Set

OK Cancel

2.1.4 Server Access

The port number set the local VMS SmartClient for landing

Video Manager System

Surveillance Server

- Getting Started
- Advanced Configuration
- Hardware Devices
- Storage Information
- Server Access
- Users
- Services

Server Access Summary:

Server Name	Local Port	Internet Access	Internet Address	Internet Port	Max. No. of Clients
Server	8685	<input type="checkbox"/>		1025	100

2.1.5 User Management

2.1.5.1 Edit User Information

Users list management, open the User List window

Add users
choose "Basic Users", it can be used for client login"
choose "Administrator Users", it can be used for landing and configuration management"

Add user

User name:

Password:

Confirm Password:

Administrator Users Basic Users

Add User

User name	Editor	Delete
admin	Editor	Delete

Back Finish Cancel

Users can be added in the window, modify users, delete users.

When new users can choose two types of users,

- 1: Administrator user (VMS Management can be used for landing and landing VMS SmartClient),
- 2: normal user (used only for landing VMS SmartClient).

2.1.5.2 Edit User Permissions

You can set permissions and equipment VMS SmartClient on the channel to the specified user

Video Manager System

Surveillance Server

- Getting Started
- Advanced Configuration
 - Hardware Devices
 - Storage Information
 - Server Access
 - Users
 - admin
 - Services

admin Access Summary:

User Name	User Type	Live	Playback	Edit Views	Access to Cameras
admin	Super User	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> All Cameras

Camera and Feature Access Details:

Camera	Live	PTZ	Manual Recording	Playback	AVI Export	Subscribe Alarm
<input checked="" type="checkbox"/> Camera 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Camera 11	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

2.1.6 Service

Background VMS Server Control Program

Video Manager System

Surveillance Server

- Getting Started
- Advanced Configuration
 - Hardware Devices
 - Storage Information
 - Server Access
 - Users
 - admin
 - Services

Service Control:

Service Name	Status	Service Start/Stop	Service Restart
VMS_Server	Started	Stop	Restart

VMS Server can control the use of state, only to be turned back at the video store, VMS SmartClient client to normal use

2.2 client and operating instructions

After VMS Management configuration is complete, you can use VMS SmartClient video preview and playback clients, VMS SmartClient with VMS Management can be installed on the same machine can also be individually installed on the other machine


2.2.1 Login

Enter VMS Management machine where IP and port number (if it is installed on the same machine, IP is 127.0.0.1, port number 80 by default, when the server access ports on VMS Management is changed, the port number to use consistent)




The screenshot shows a 'Connect to Server' dialog box for 'VMS Monitor Login'. The 'Server Address' field is set to '127.0.0.1:8685', the 'User' field is set to 'admin', and the 'Password' field is empty. The 'Remember Password' checkbox is checked, and the 'Auto Login' checkbox is unchecked. The 'Connect' and 'Cancel' buttons are visible at the bottom right.

 On VMS Management user to create login authentication

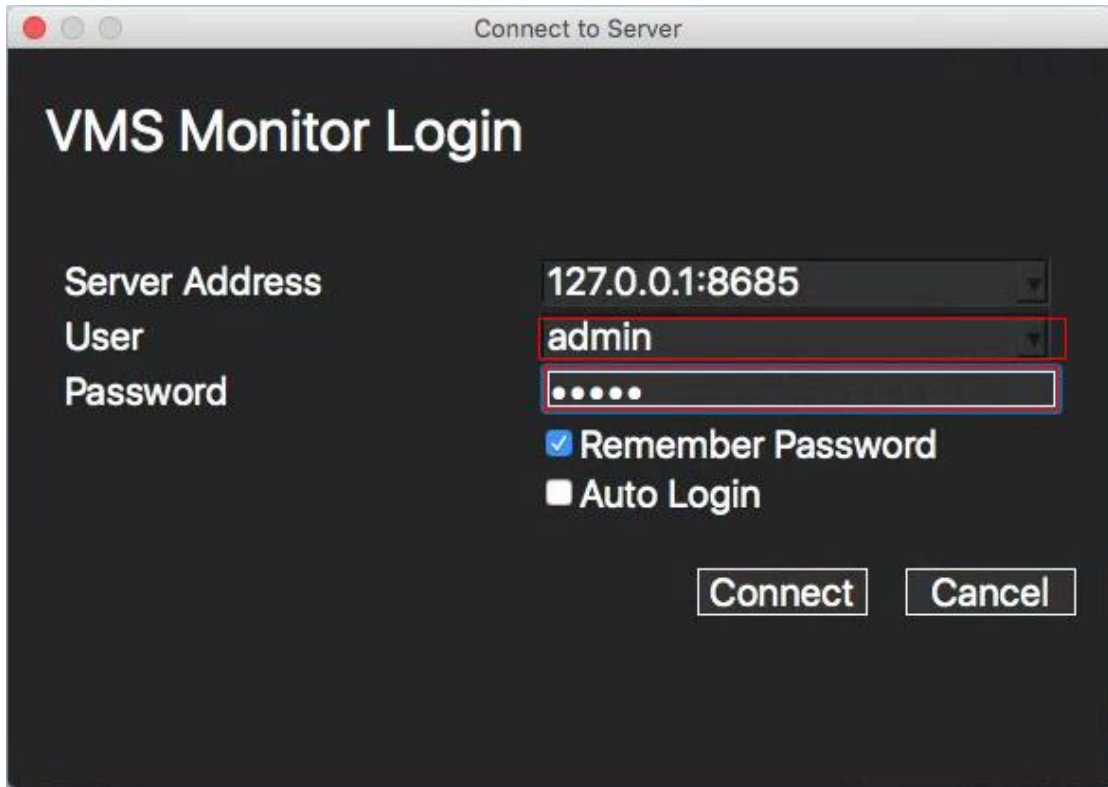


2.2.2 Live Preview

 Live Preview Interface

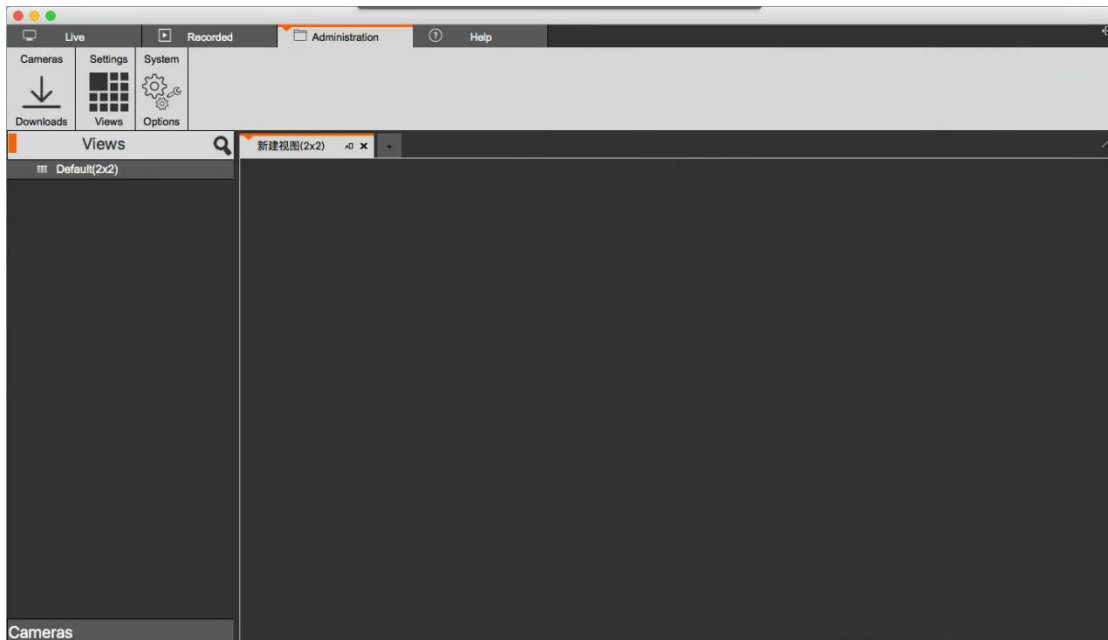

 
2.2.2.1 Live Preview Features

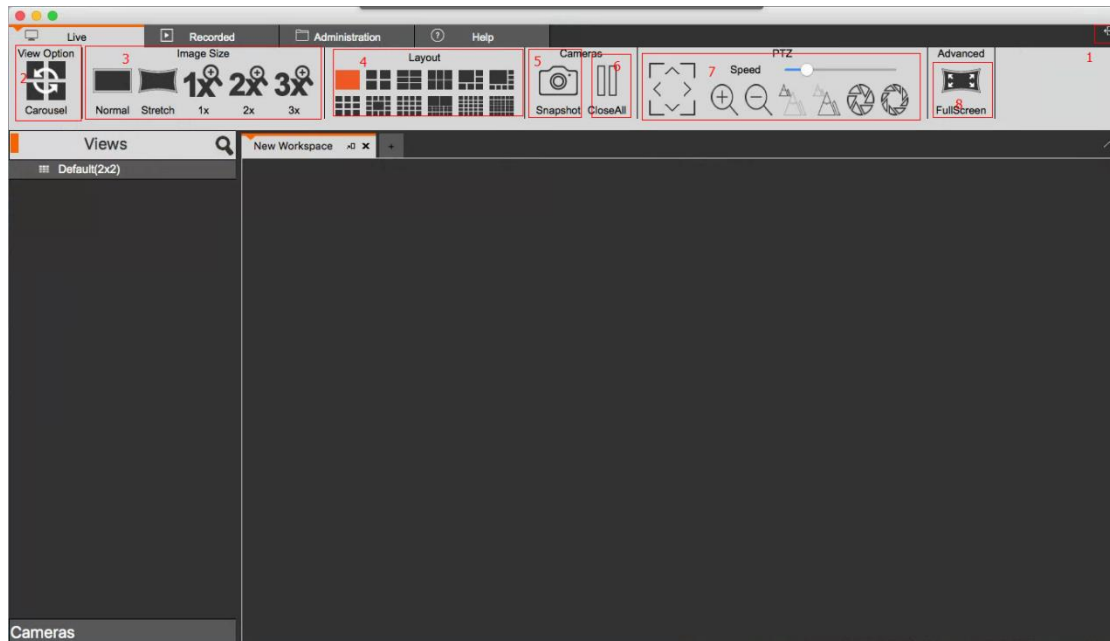

- 1> Logout: Exit the current user to return to the login screen.
- 2> View round robin: All round robin round robin set up view
- 3> Image size:
 - a. routine: The image is displayed in real scale.
 - b. Stretch: The image is displayed in the window size.
 - c. 1 times: the image is not scaled.
 - d. 2 times: 2 times image to enlarge.
 - e. 3 times: 3 times image to enlarge.
- 4> View: Select the type of layout view window.
- 5> Snapshot: snapshot picture of the current window.
- 6> Close the current camera video.
- 7> PTZ control (only enabled devices that support PTZ control is effective).
- 8> Full Screen: Full-screen view


2.2.2.2 View switching video

 User set a good view layouts to quickly switch view preview video

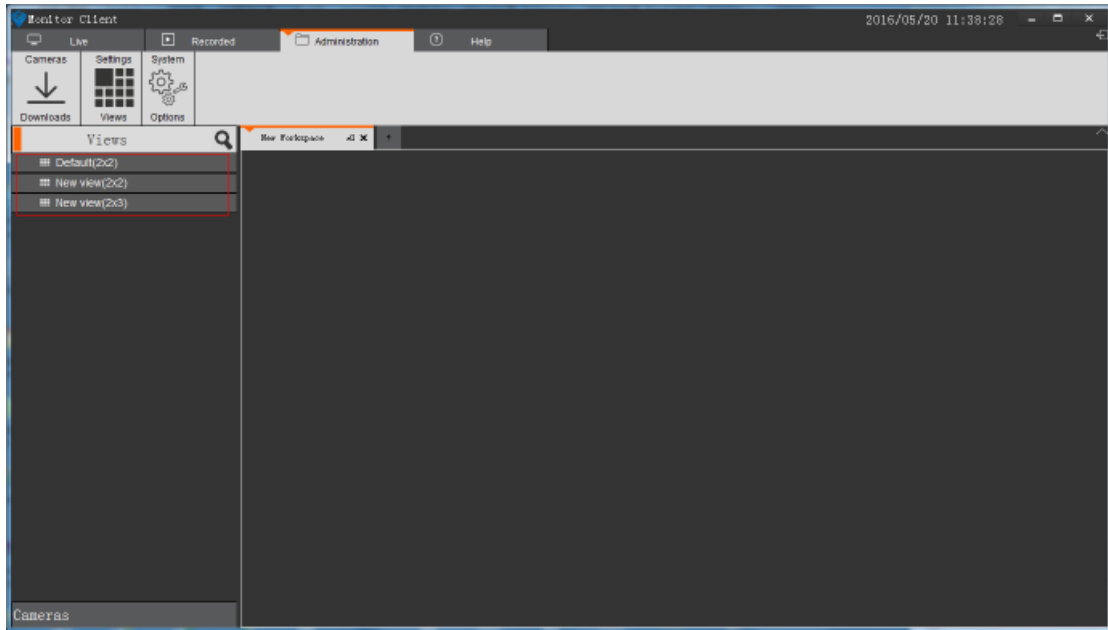


2.2.2.3 Select a camera preview video

 Select the camera onto the specified window preview video

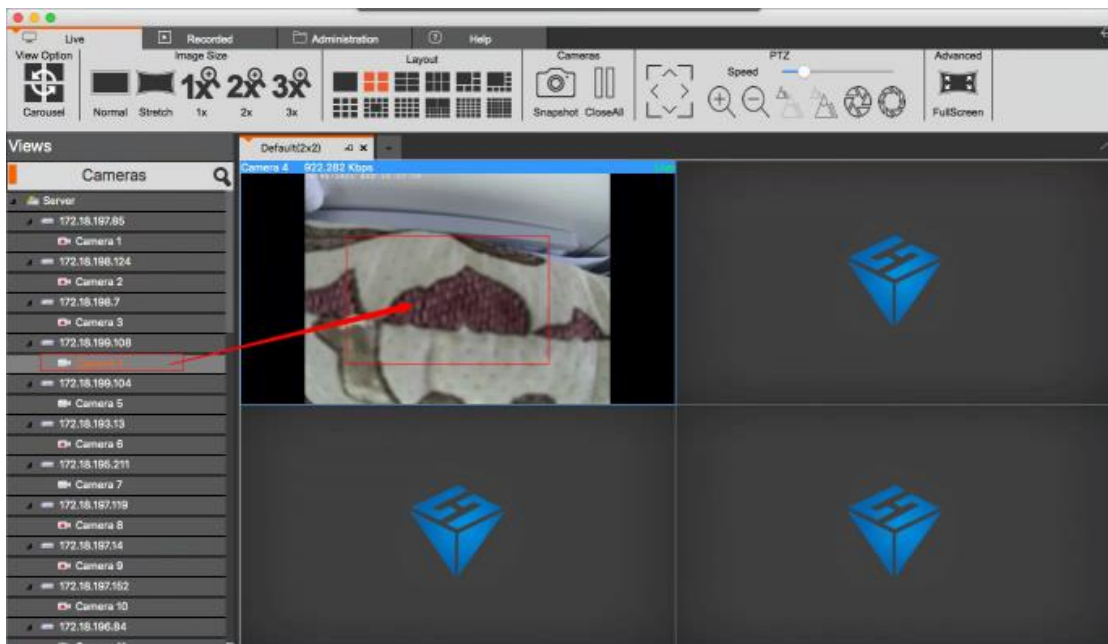


2.2.2.4 PTZ control

 - a. Select the required PTZ control window.
- b. In the PTZ console window for the selected PTZ control.

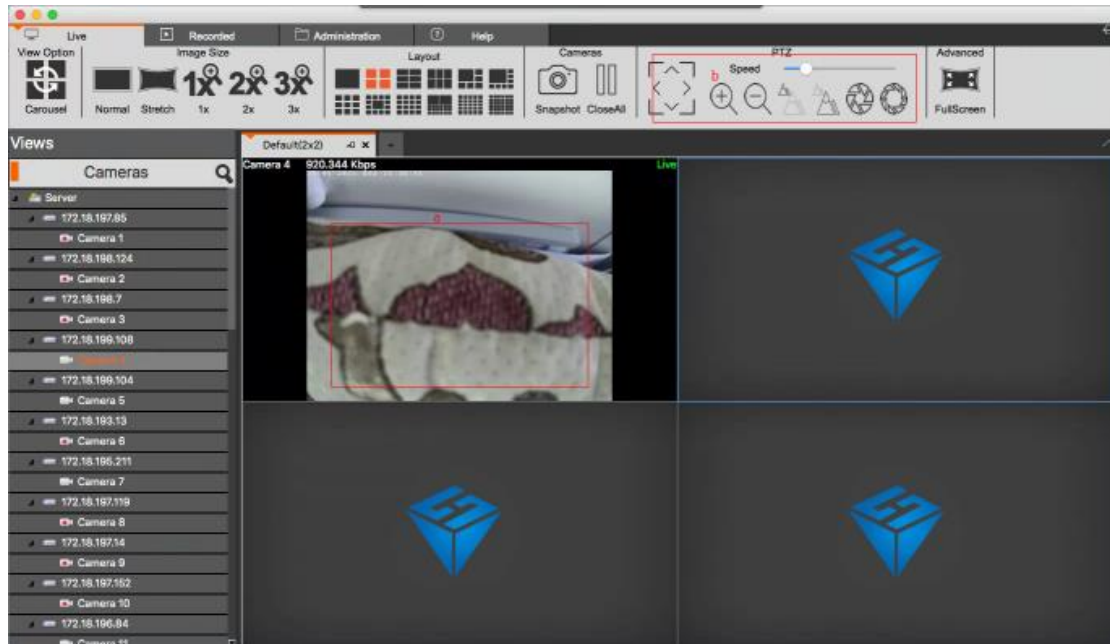


2.2.2.5 Video Window Toolbar Function

 - a. stop the current window and open video
- b. Image capture
- c. Local Recording
- d. talkback
- e. sound.
- f. Stream Switching
- g. digital zoom

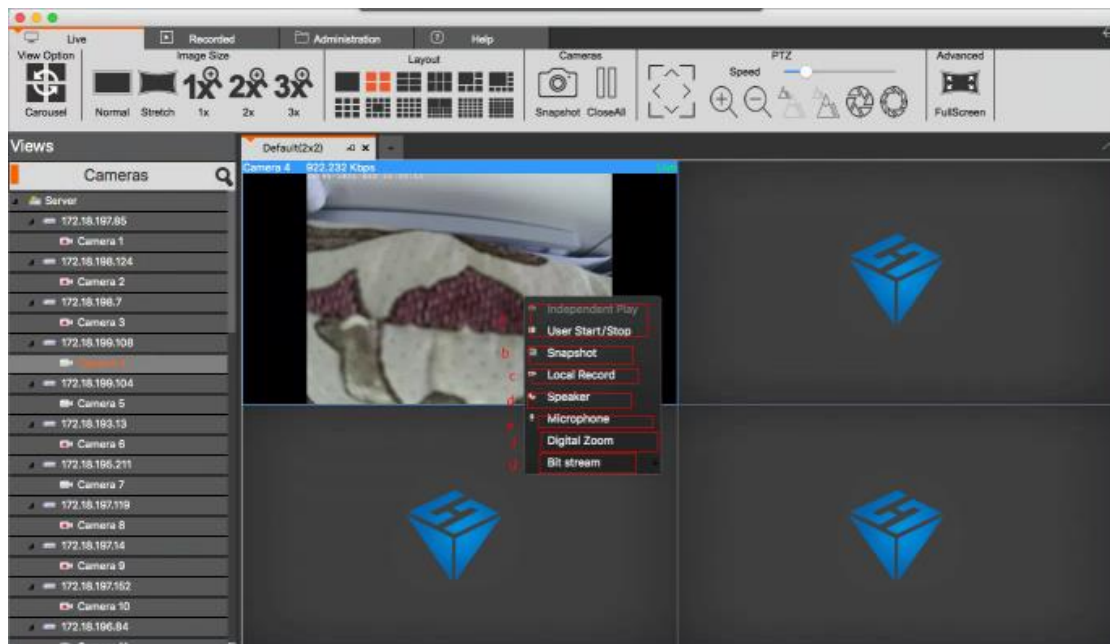


2.2.2.6 View polling

 Click the button to open the round robin round robin view, click again to close the round robin.

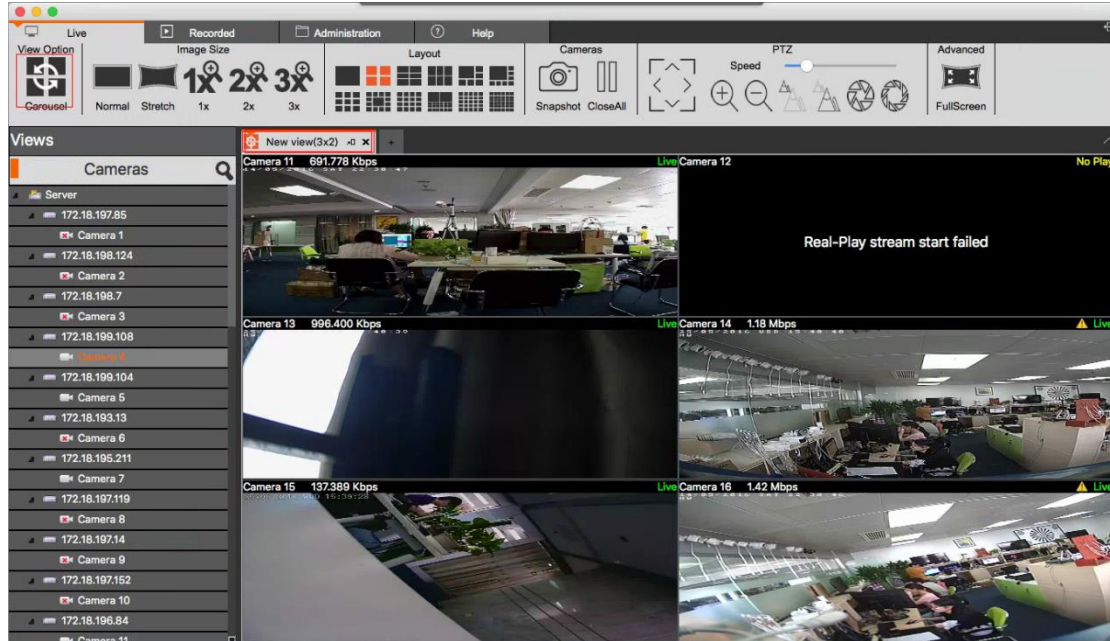

2.2.2.7 Full Screen

 Click to view full-screen to enter full screen mode, right-click on the screen to exit full-screen button to exit full-screen mode

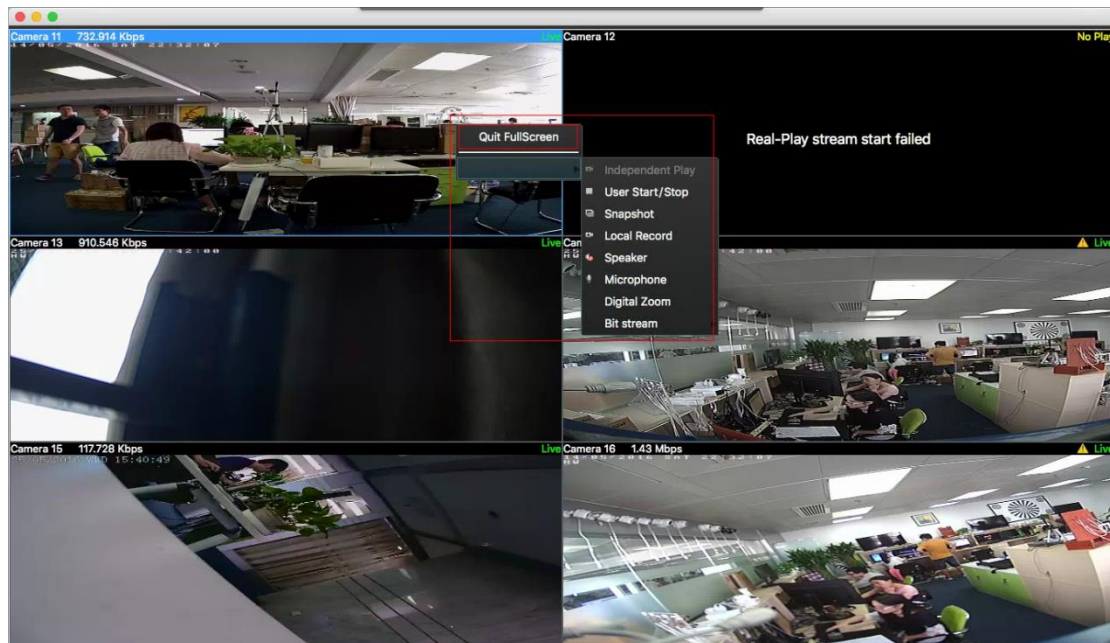


2.2.3 Playback

Playback is divided into platform video playback and video playback devices.

Under VMS platform playback only in case of server configuration can have playback device playback only in the case of video equipment to playback.

 2.2.3.1 Playback Interface Features

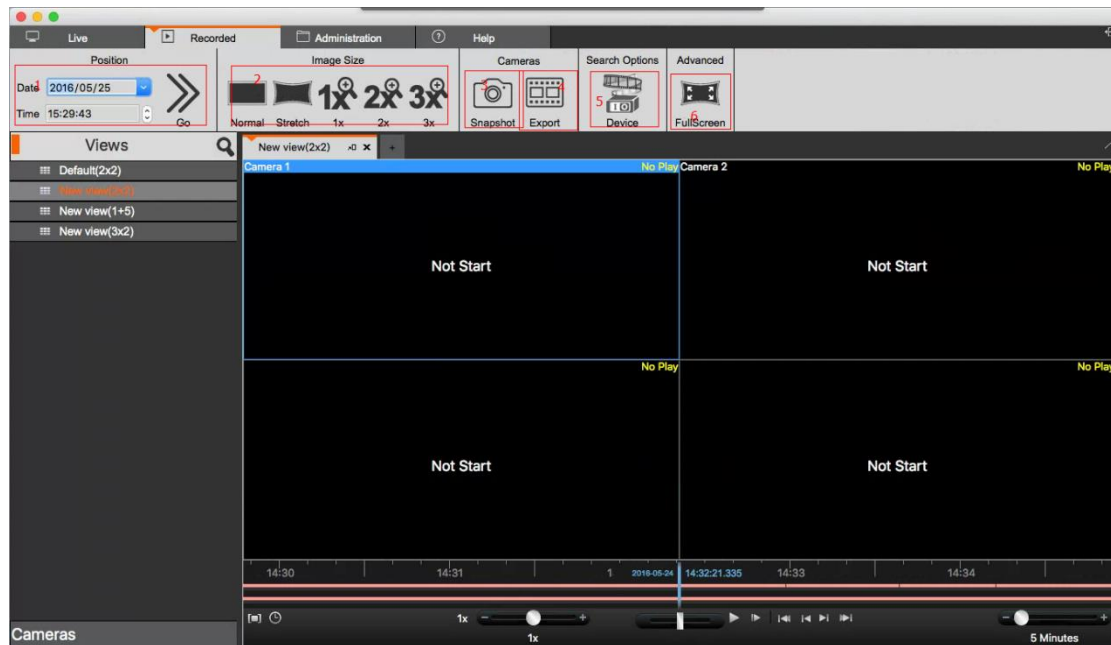


- 1> Location: Depending on the selected time position quickly locate to a specified location
- 2> image size
 - a. routine: The image is displayed in the actual proportion
 - b. Stretch: The image is displayed in the window size
 - c. 1 times: the image is not scaled
 - d. 2 times: 2 times image to enlarge
 - e. 3 times: 3 times image to enlarge
- 3> Snapshot: Save the currently selected video playback window
- 4> Export
 - a. playback platform to export the currently selected playback video window, select the time period
 - b. equipment playback in the export file selected in the list of video files
- 5> Device: Enter the playback interface device
- 6> Full screen: view into full screen mode

2.2.3.2 platform video playback


2.2.3.2.1 switch views video playback

 View user edited video playback fast switching

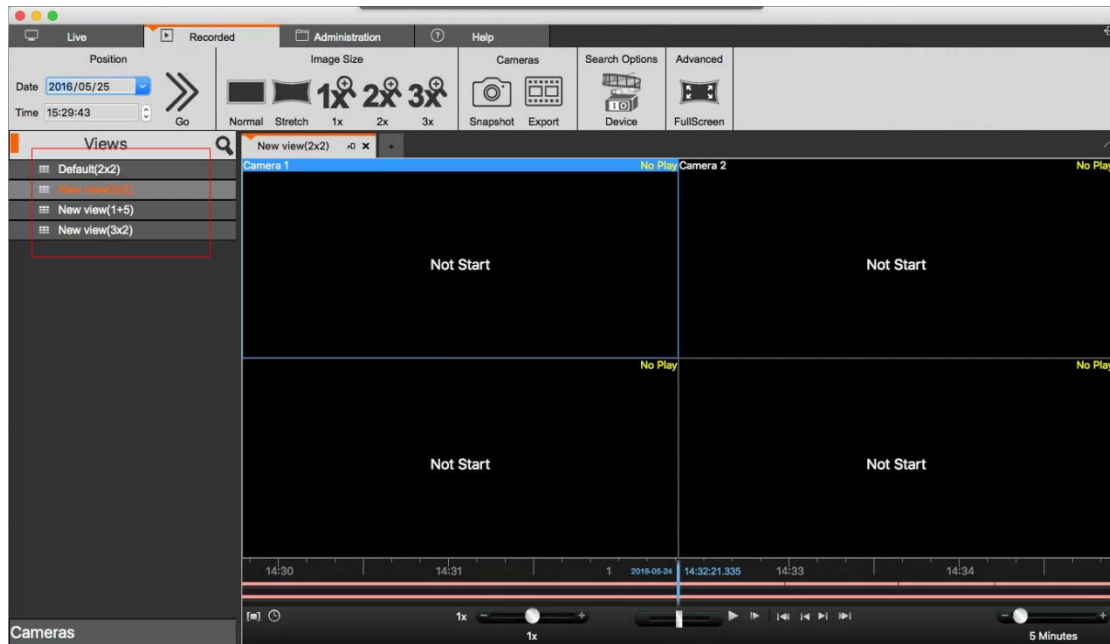


2.2.3.2.2 The limiting choose camera video playback

 Select the desired camera onto the specified window

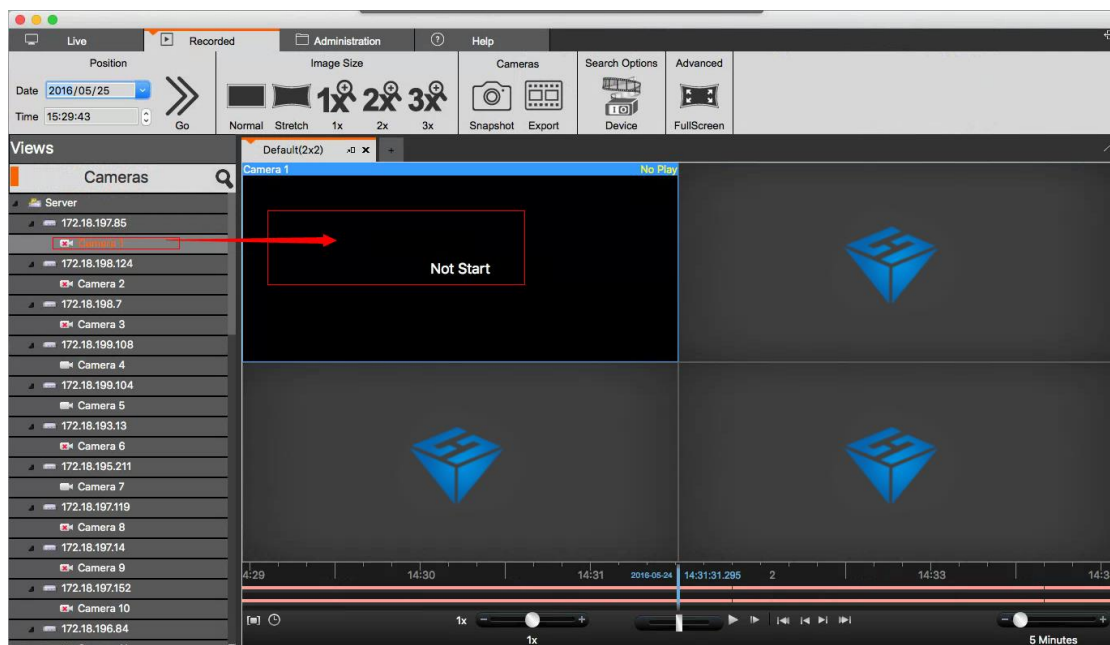


2.2.3.2.3 Video Search

 Enter playback interface or playback interface switching view, the view will automatically search out all the time in the video window, and displayed on a timeline

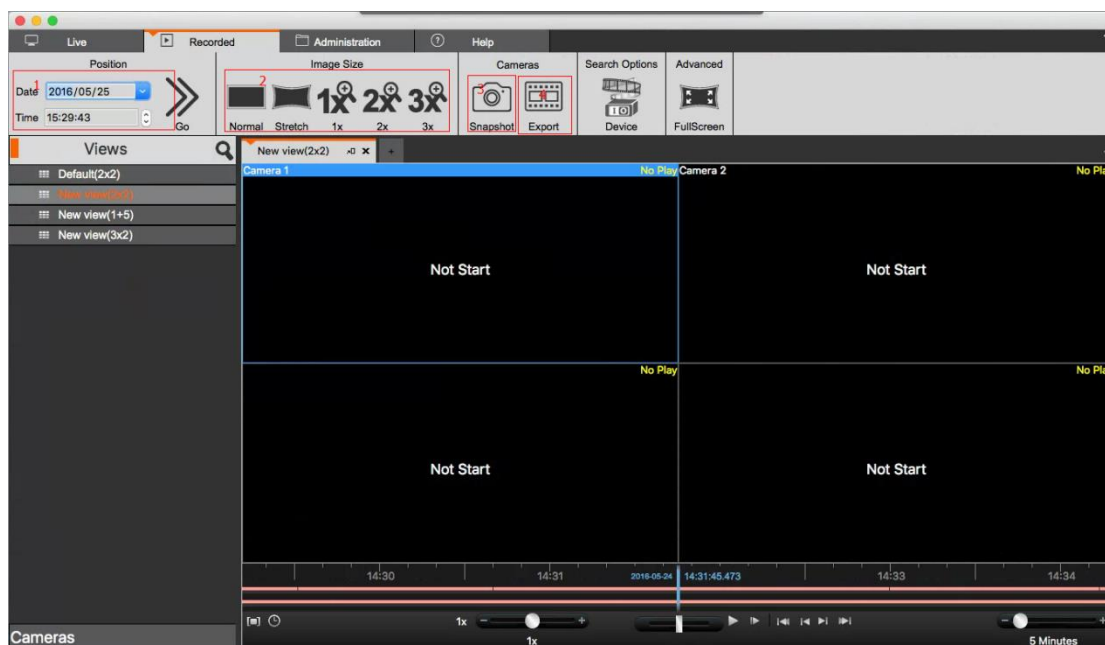

Timeline of type:

 
- 1> in the timeline shows the currently selected window video timeline.
- 2> In the following timeline shows the current view all the video cameras and the timeline set.

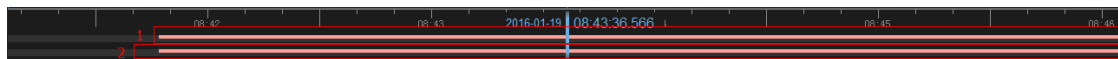


2.2.3.2.4 video playback

2.2.3.2.4.1 synchronous playback

 
Click the play button to start video playback, the playback mode to view simultaneous playback, the view in the window will play back video at the same time

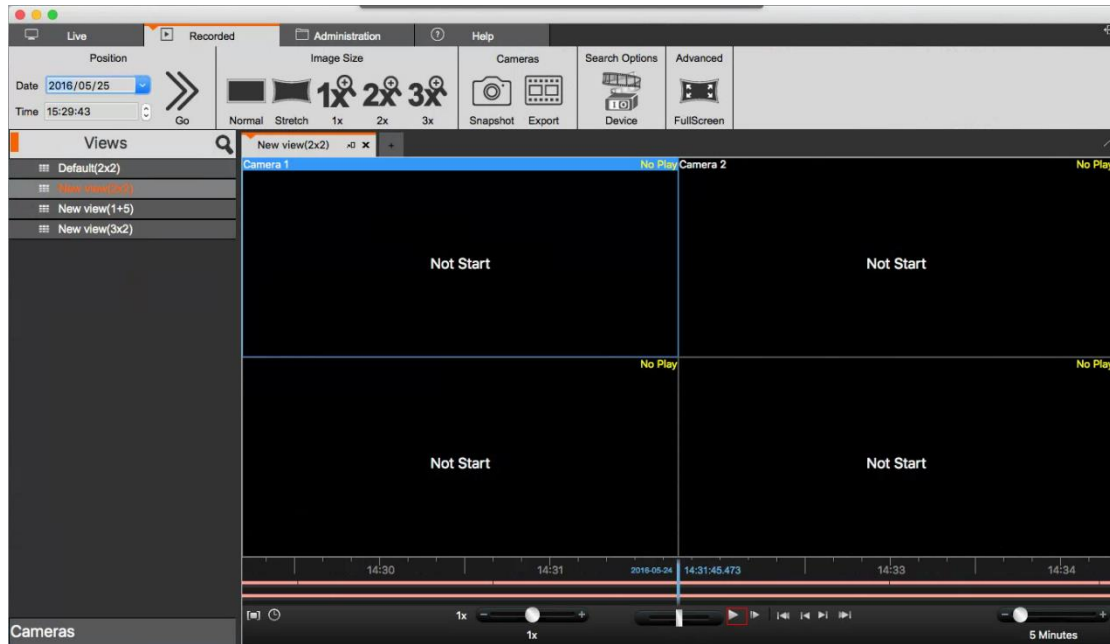

 Synchronous playback function Toolbar description:

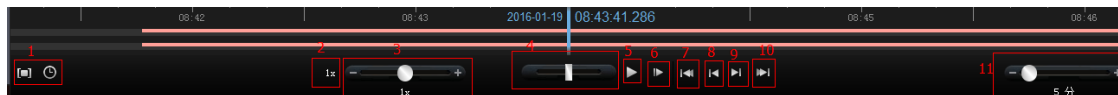

 1> Playback area: You can select the playback range, in this range loop playback.

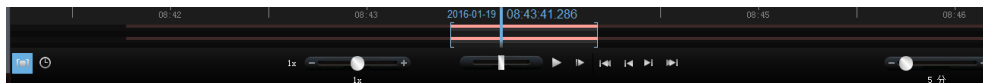

2> 1 multiple playback: fast switching to a multiple of the playback.

3> Playback multiple adjustments.

4> Quick search video.

5> Start / pause playback.

6> single-frame playback.

7> The current window of the first video segment.

8> The current window of ten Previous video segment.

9> The current window of the next video segment

 
10> The current window of the finally video segment

11> The timeline display range.

2.2.3.2.4.2 independent playback


If you only need a video playback window, you can use a separate playback. Independent playback video window will not be synchronized playback control toolbar. Independent playback window in the simple playback control bar.

Independent playback window in the window toolbar, click the independent playback button to playback individually

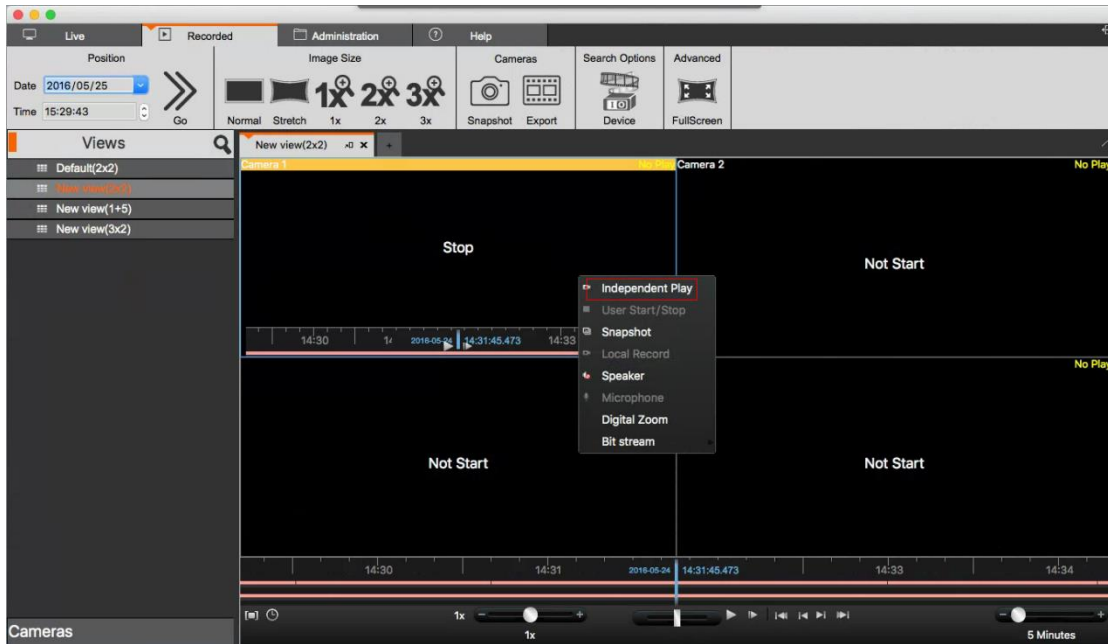

2.2.3.2.4.3 loop playback

 You can specify a time range for continuous loop video playback.

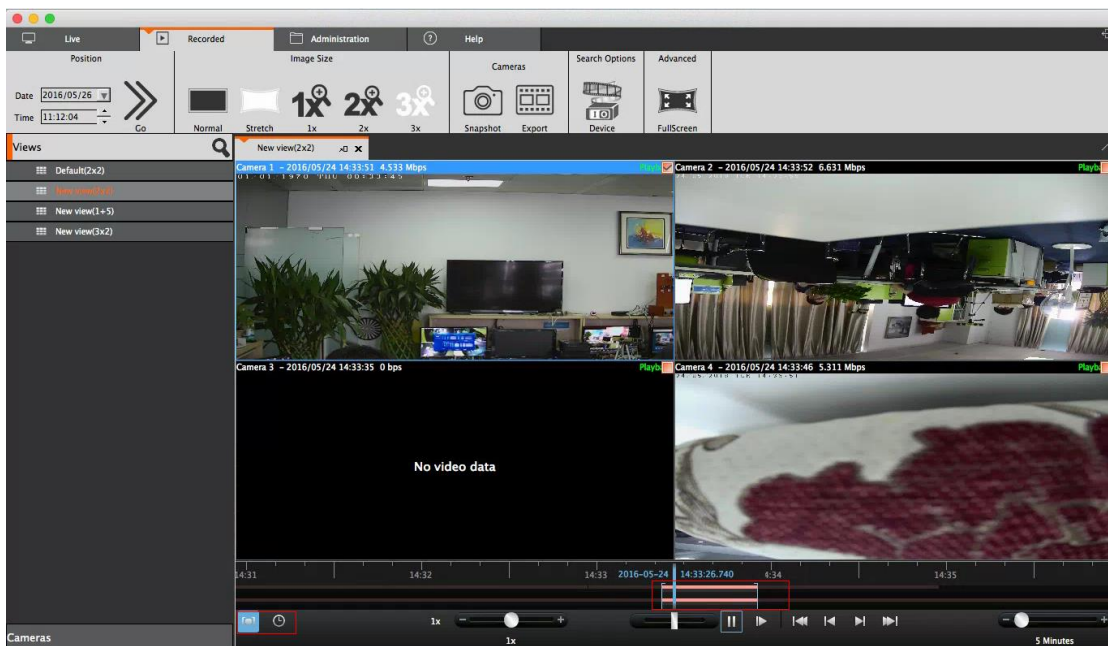

2.2.3.3 Export Video Platform

 
You can export the video server in the client on demand. You can export the view in the window of a video recording, video can also be exported in view of all of the video window.

Video exported for use:

- 1> Select the time range you want to export.




2> Select to export video window.

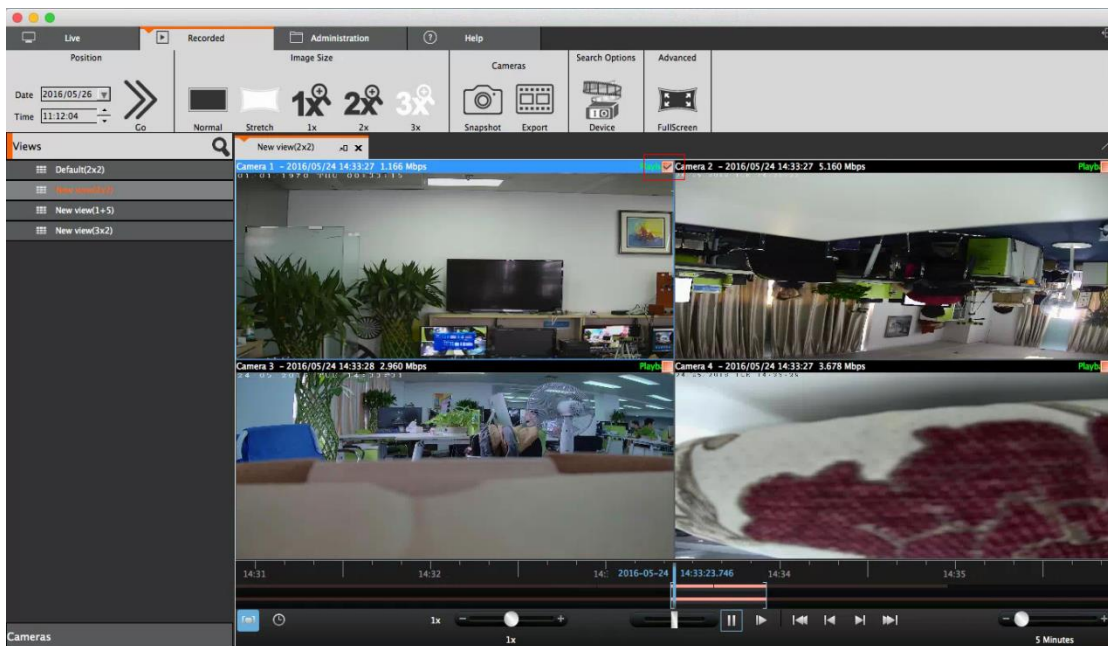


3> Click the Export button.



 
4> Select the name and location of the exported.

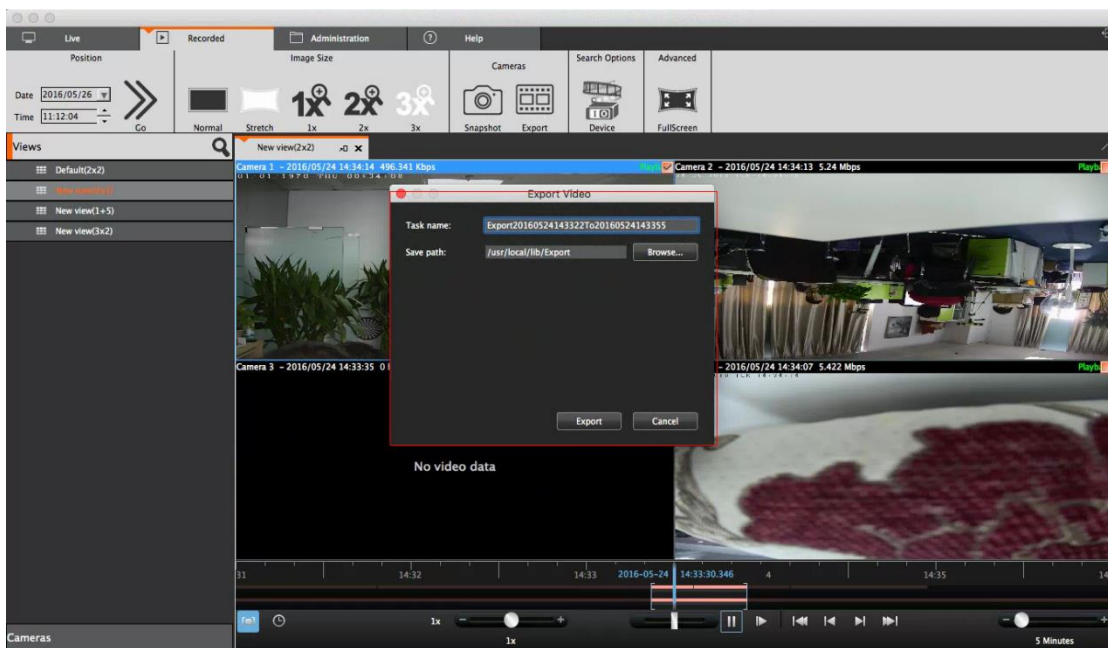

 5> After the export is completed in management functions in the export list to view details

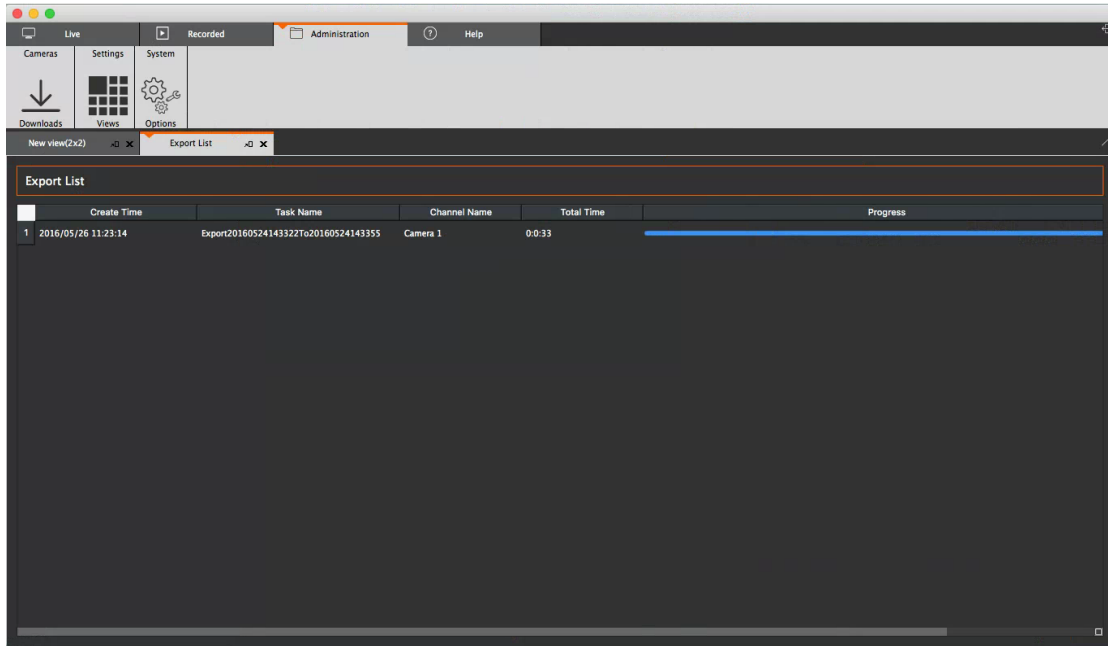

 2.2.3.4 Device Playback

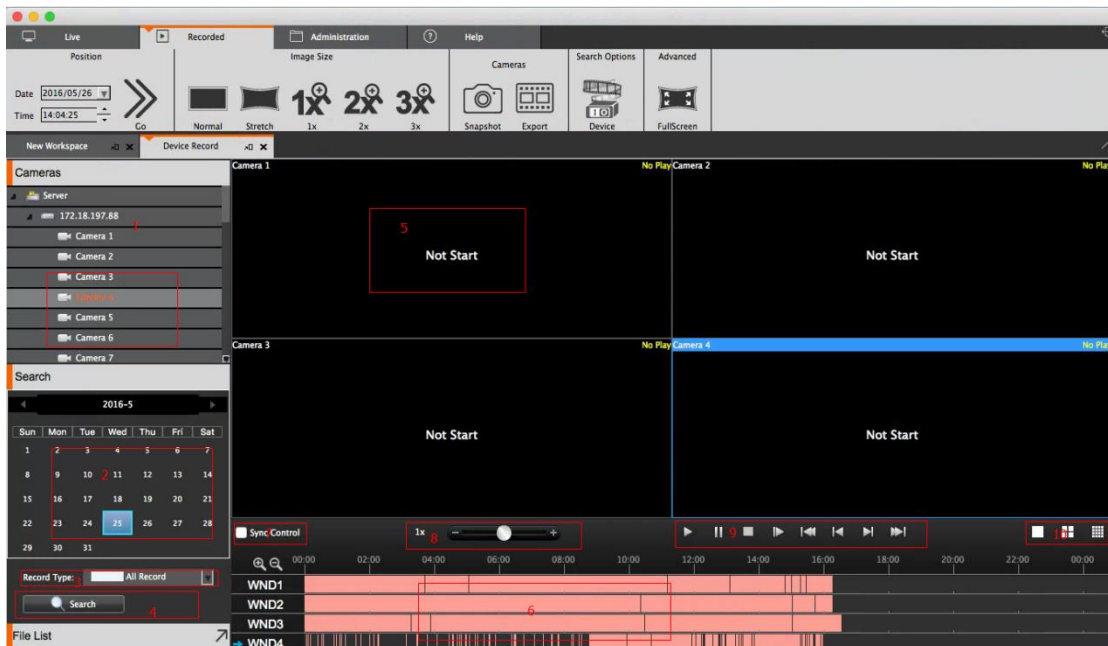


- 1> Select the channel to be played back in the device list and drag the playback window (5)
- 2> select the date to be played back
- 3> Select recording type
- 4> Video Search
- 5> Playback Window
- 6> Recording Schedule
- 7> Select synchronous control video playback
- 8> Video Playback speed control

9> Recording Playback Controls

10> View Control


2.2.3.4.1 Select playback video camera

 Select playback video camera

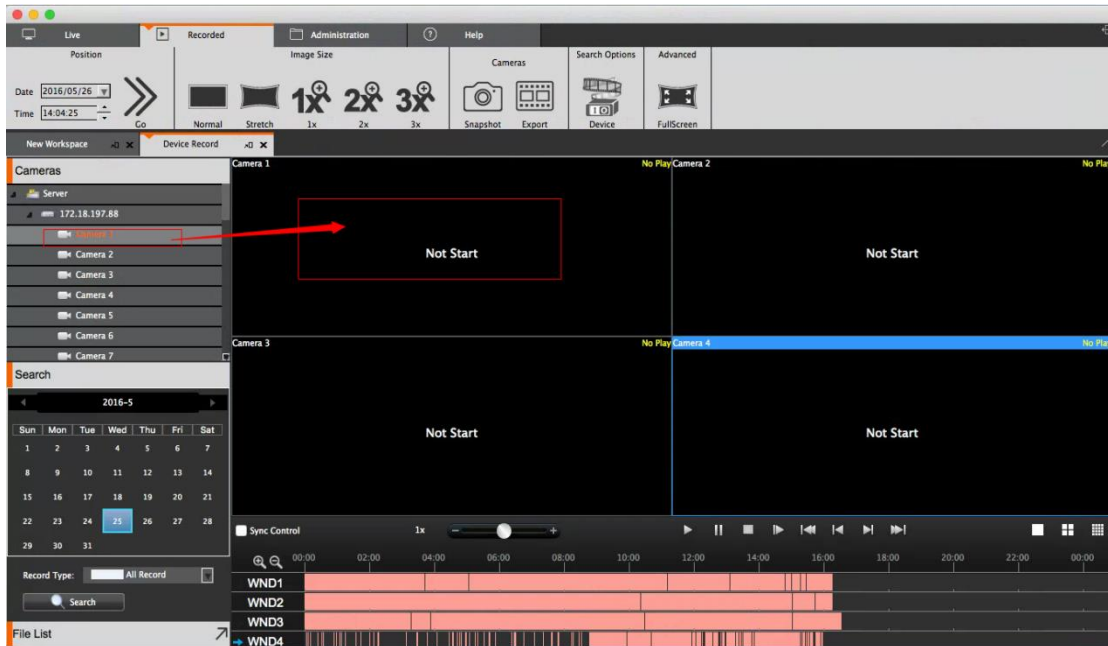


2.2.3.4.2 Video Search

 After dragging the camera view automatically search out all the windows in the view to set the date of the recording time, and displayed on a timeline

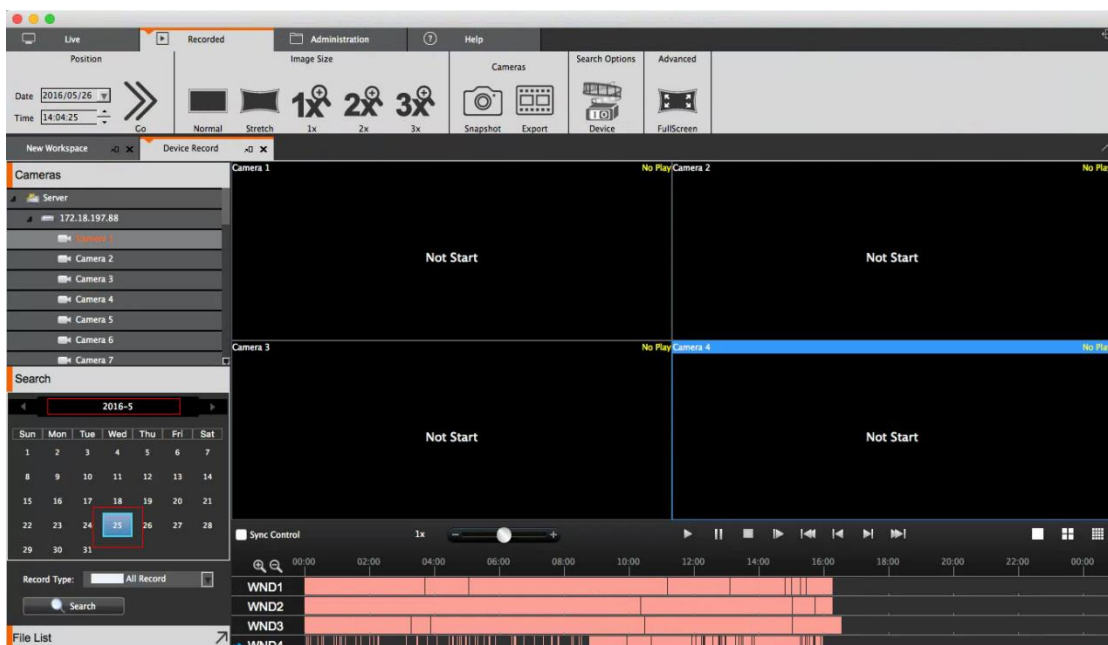


2.2.3.4.3 video playback

 Click the play button to start video playback of the currently selected window

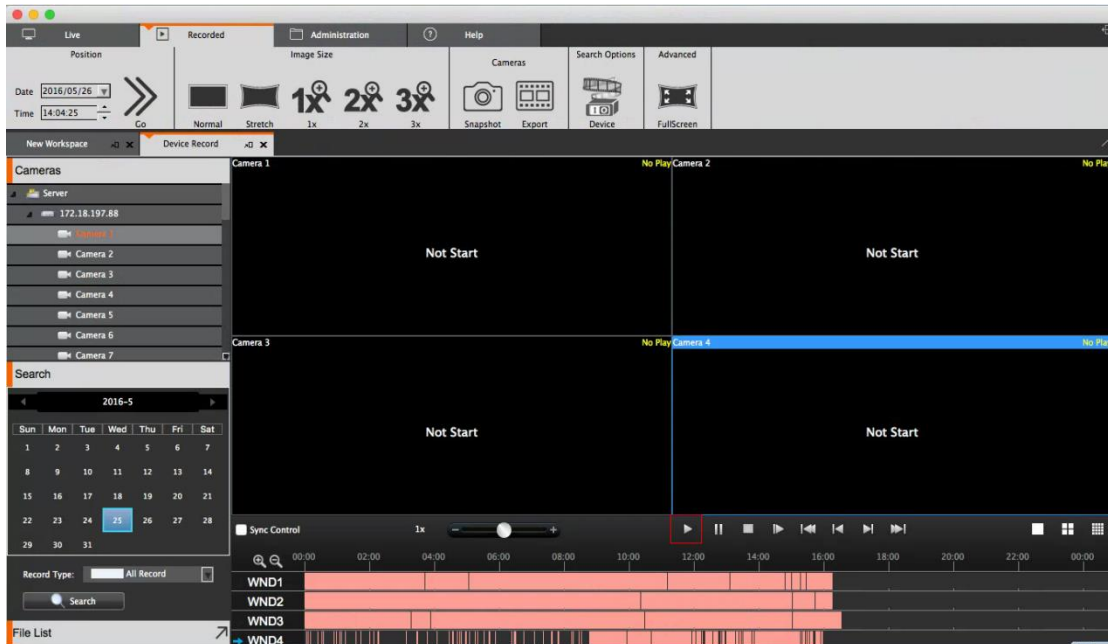


Function Playback Toolbar description:

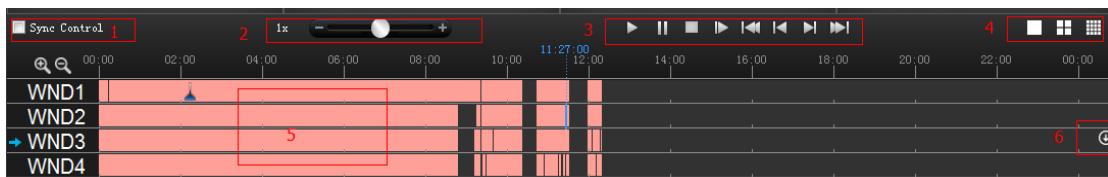 

- 1> synchronization control: When selected, the playback control is valid for all windows
- 2> Playback Speed: Adjust the playback speed of video
- 3> playback control: playback of video control start, pause, stop, single frame playback, video playback of the first segment, a video playback section, a video playback section, a video playback of the last paragraph
- 4> View options: choice of single window view, 4, and 16 window view window view
- 5> Timeline: Displays recording time
- 6> Adjust Timeline Display: 16-window view, click scrollable window display other time

 2.2.3.5 Export recording equipment

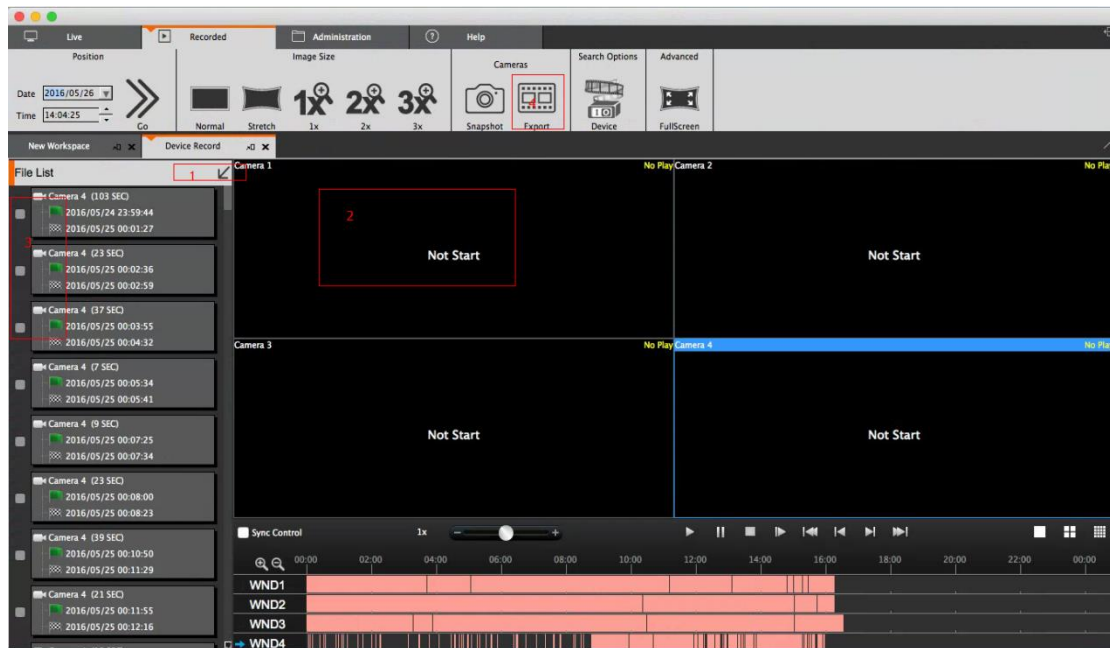


- 1> Click "File List" arrow
- 2> Select Export Video window
- 3> Select the video file you want to export
- 4> Click Export

2.2.4 Management function


2.2.4.1 Export List

 See video of the export list information

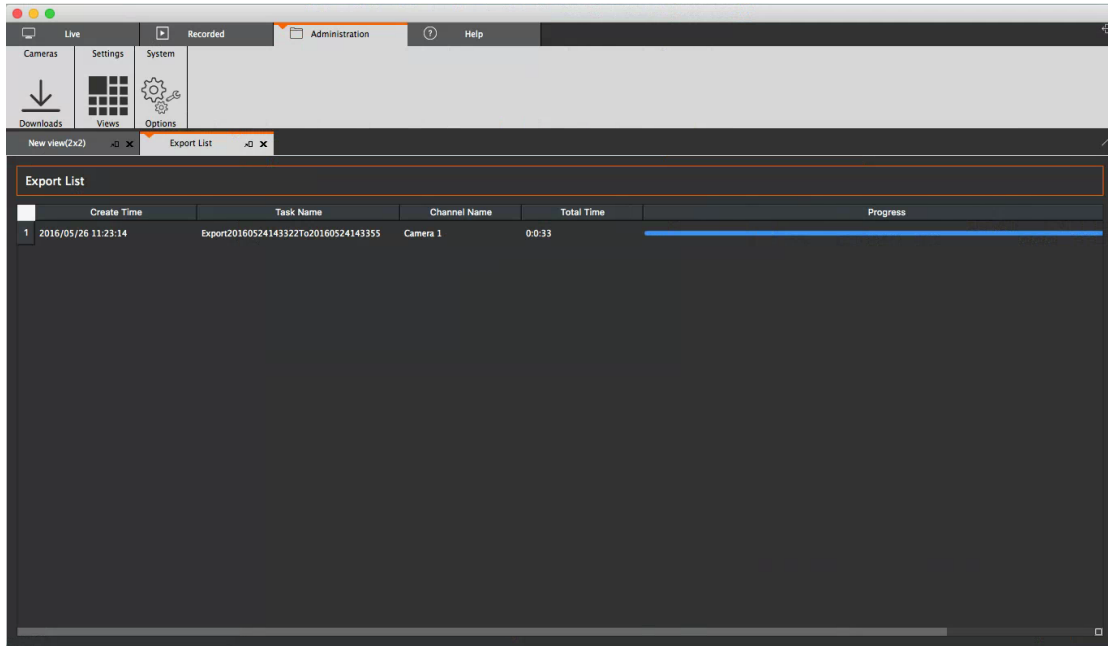

2.2.4.2 View Settings


 
The role of view is that you can pre-edit content layout and views good views, quickly switch the video area. And there will be saved to the VMS platform for later use

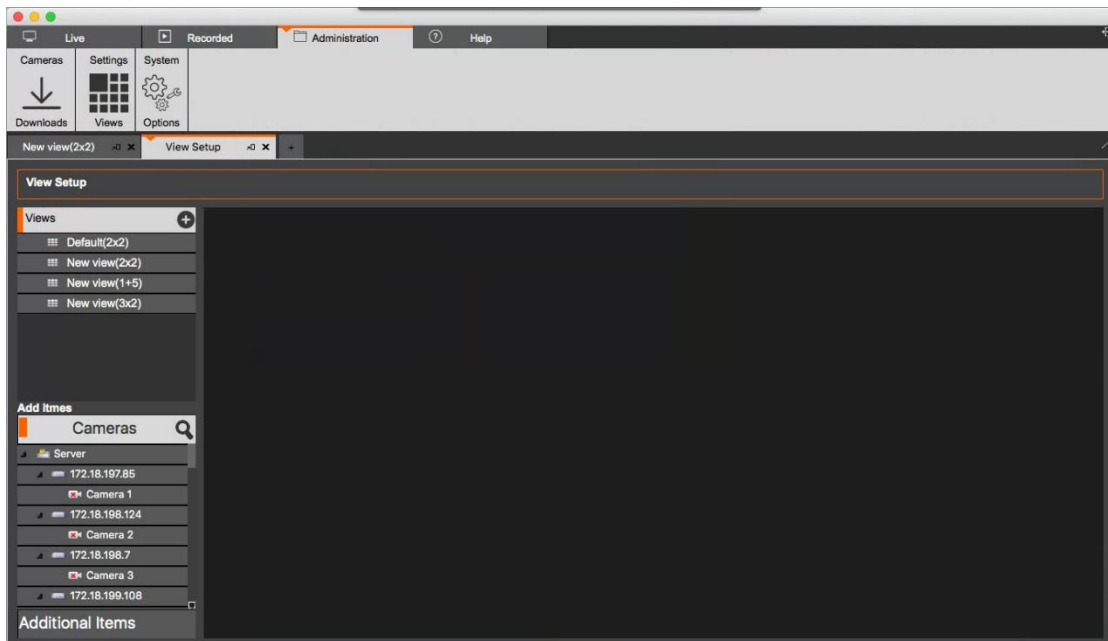

2.2.4.2.1 View Editor


2.2.4.2.1.1 New View

  Click the Add button to select the desired view layout type

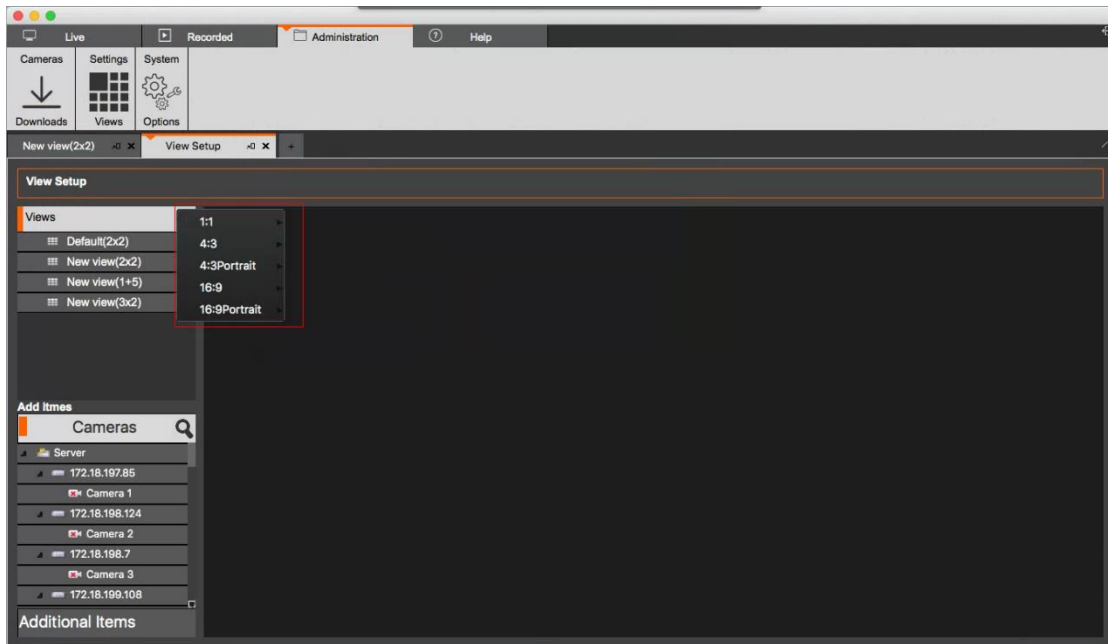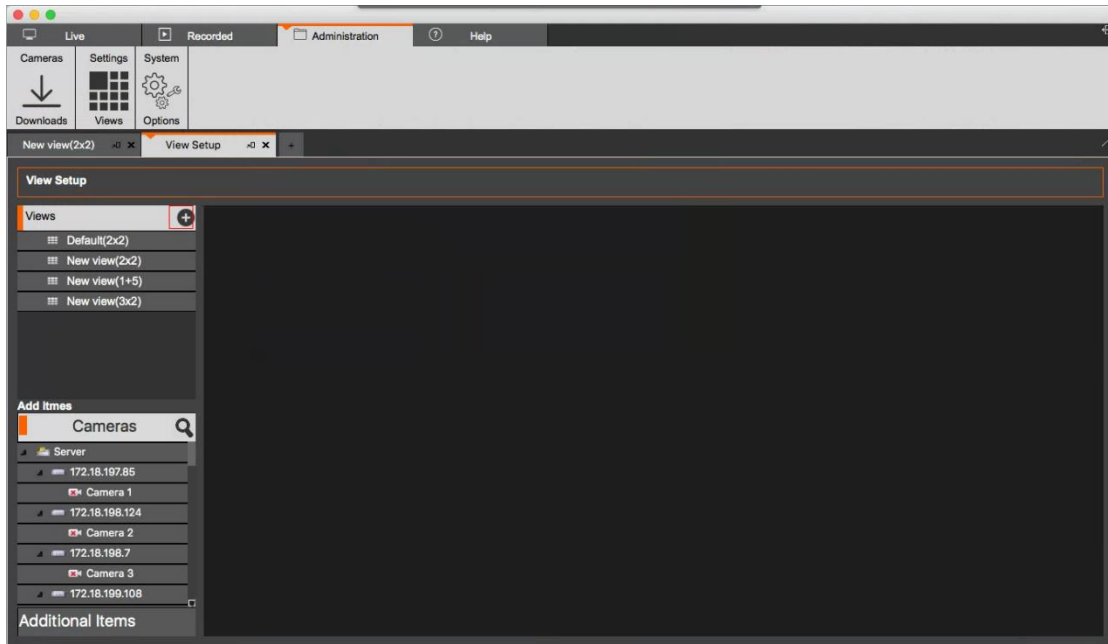


2.2.4.2.1.2 view content editor

 
There are four types of views content, 1 Camera 2 Image, 3. HTML page 4 video carousel
Select the view for editing

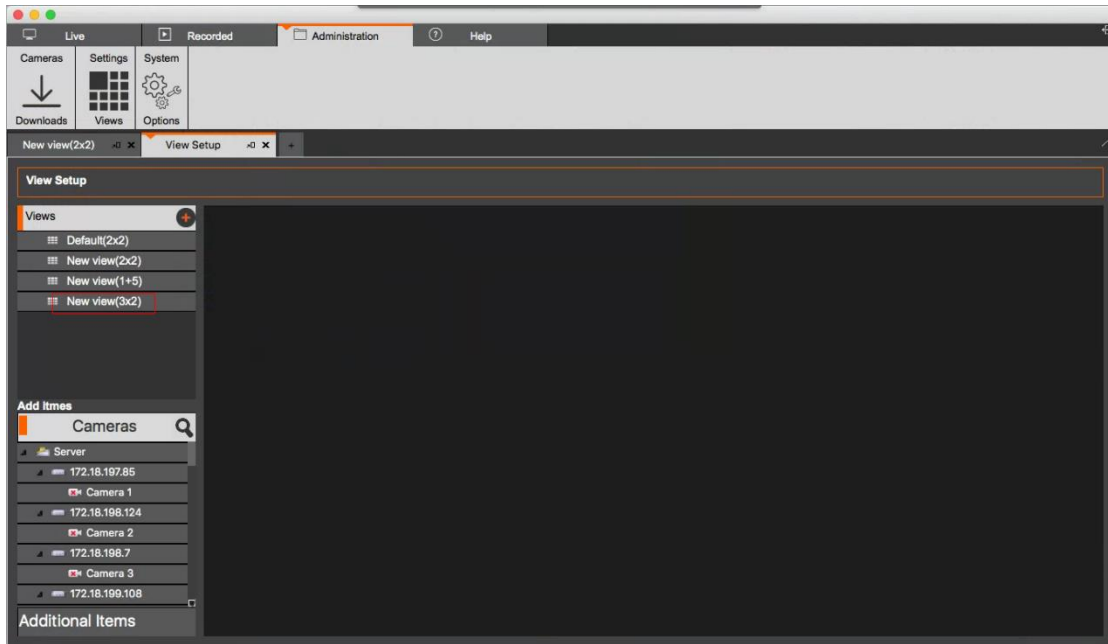

 
1> Set View window to add a video device, select the camera, onto the target window to complete the video to add.

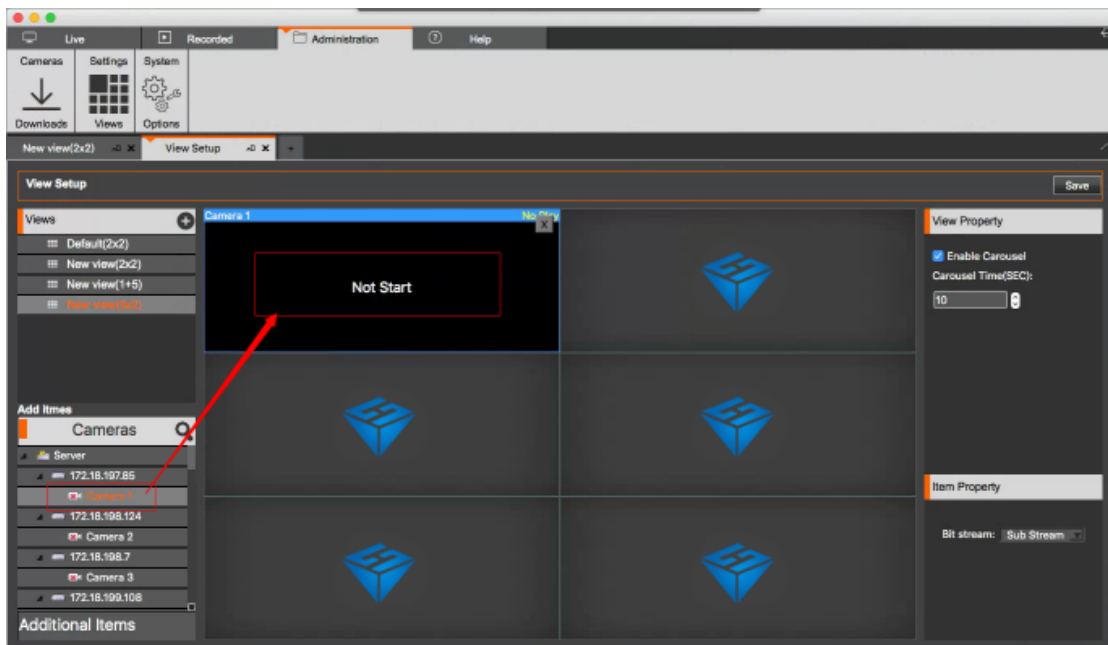

 
- 2> Set the page view window to add text
- a. Click on other items
 - b. Select the "HTML page"
 - c. Drag the specified window
 - d. Enter the web address

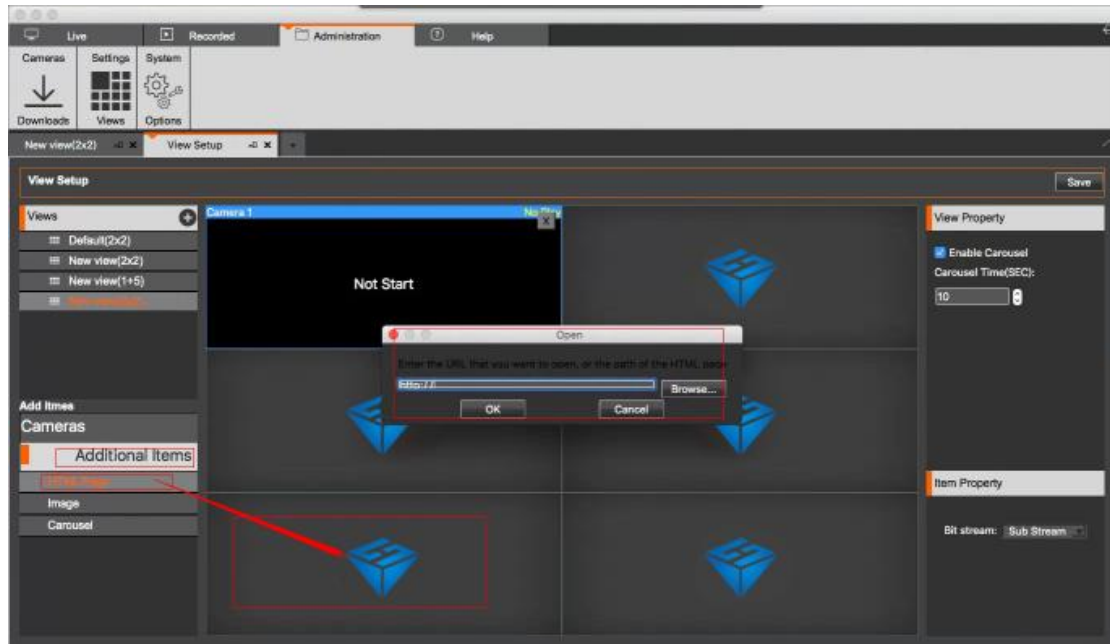

 - 3> Set View window Add image
 - a. Select the "Image"
 - b. Drag a specified window
 - c. Select a picture

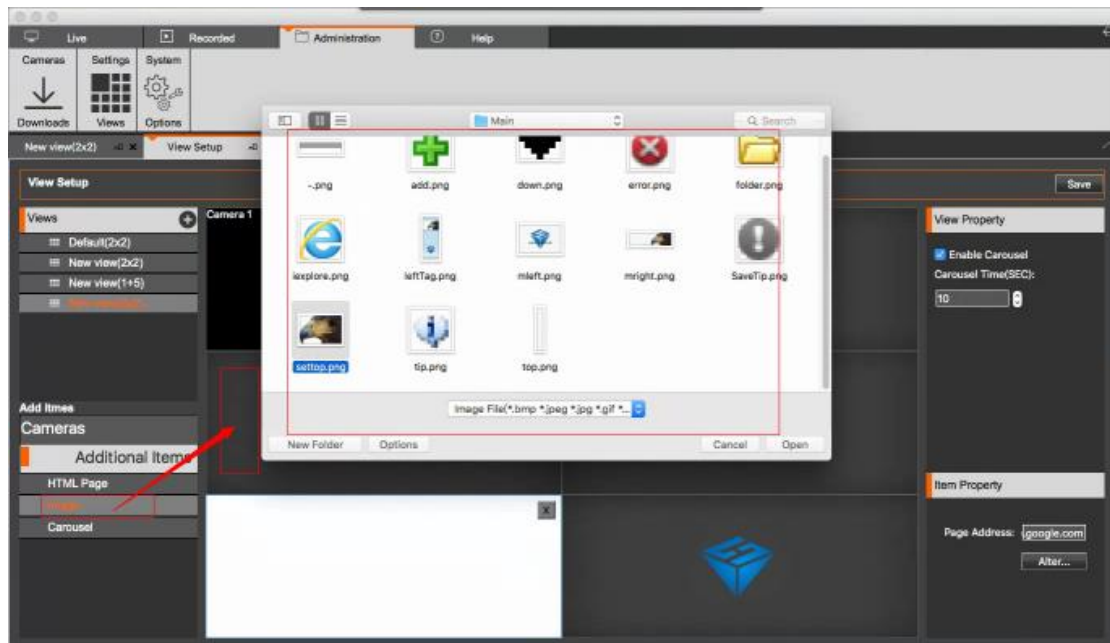


 - 4> Set window view window to add round robin
 - a. Select the "round robin"
 - b. Drag a specified window
 - c. Select the desired window polling device
 - d. Set the video window polling time
 - e. Set the video stream type

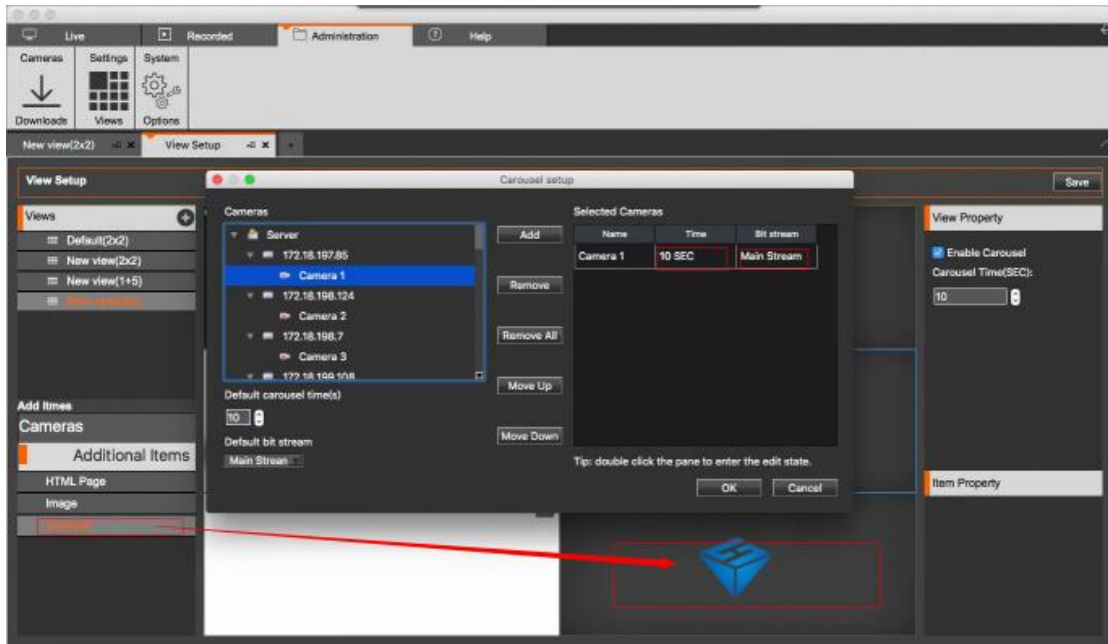


2.2.4.2.1.3 Modify the view name

 Double-click to modify the view to enter edit mode, modify the view name

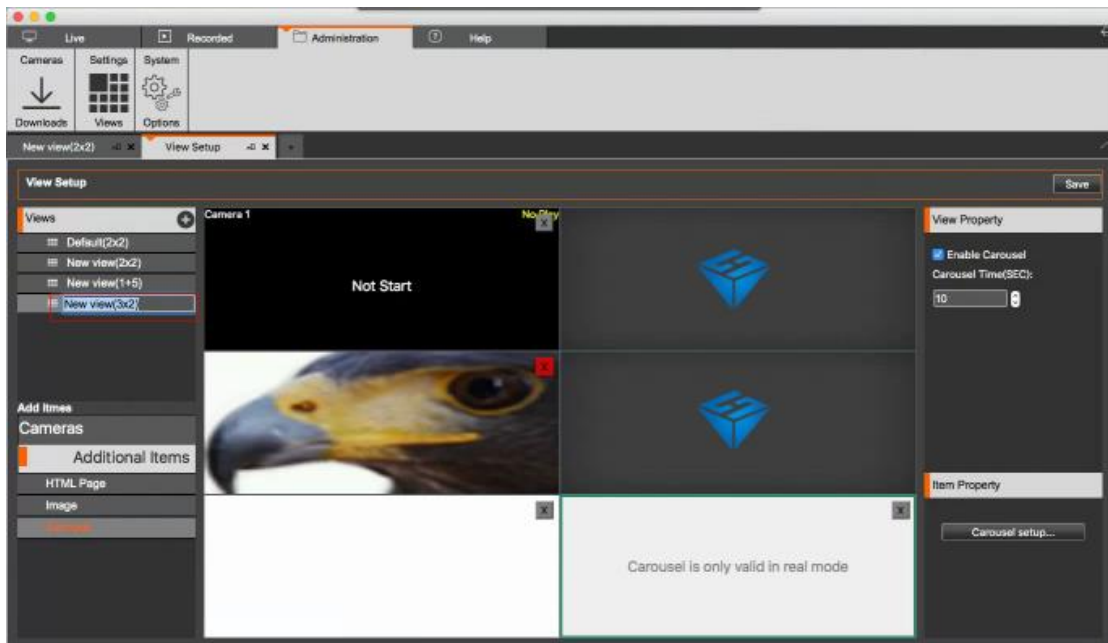


2.2.4.2.1.4 Delete View

 Select the Right View pop-up menu select Delete View

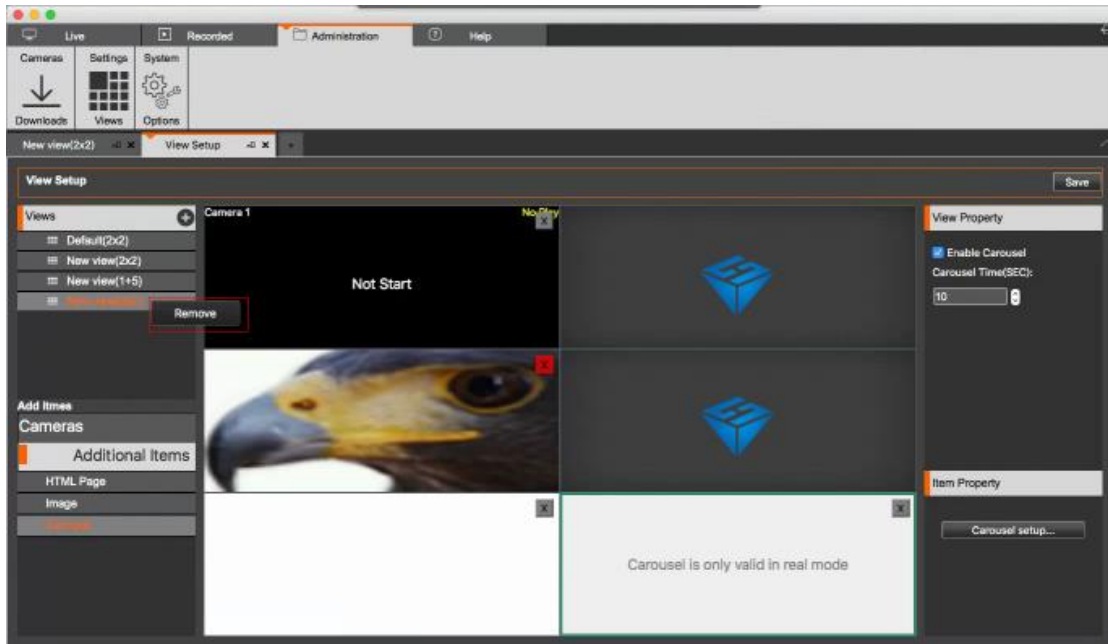


2.2.4.2.1.5 Set View polling

 - 1> select the "Turn round robin"
- 2> set the polling interval
- 3> Set the video polling stream

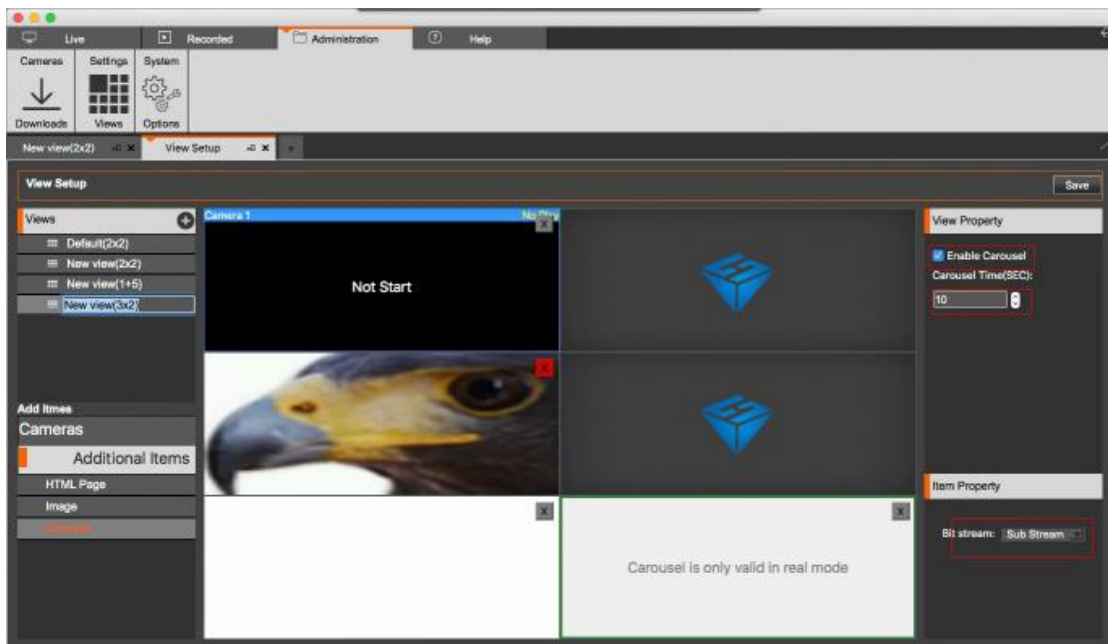


2.2.4.2.1.6 Save Edit

 Rear view of editing you must remember to click Save to take effect

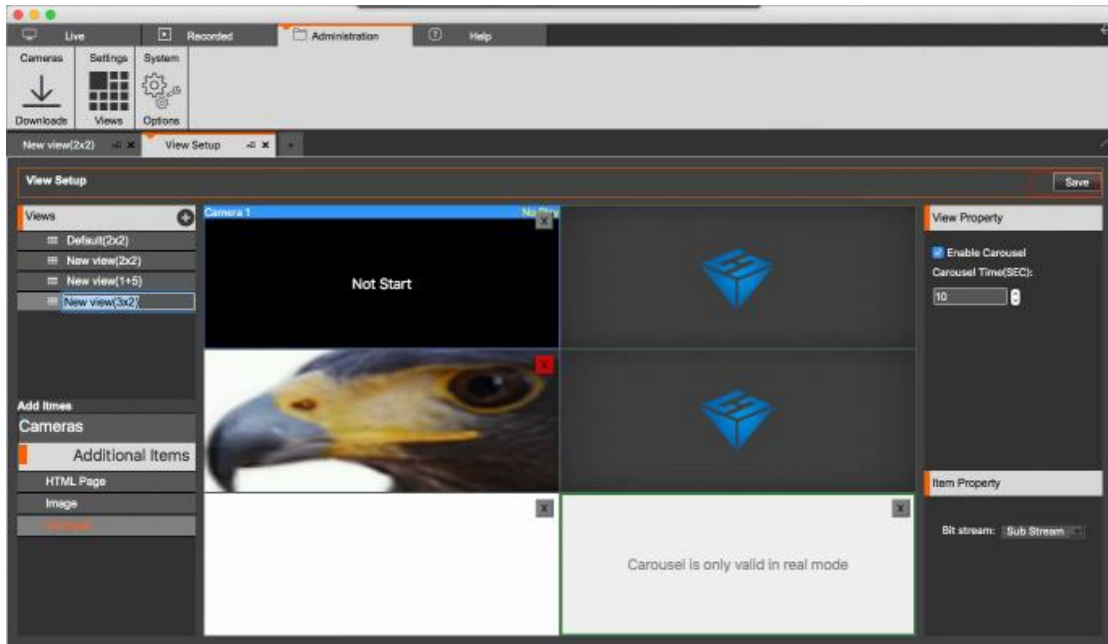

 2.2.4.3 System parameter settings

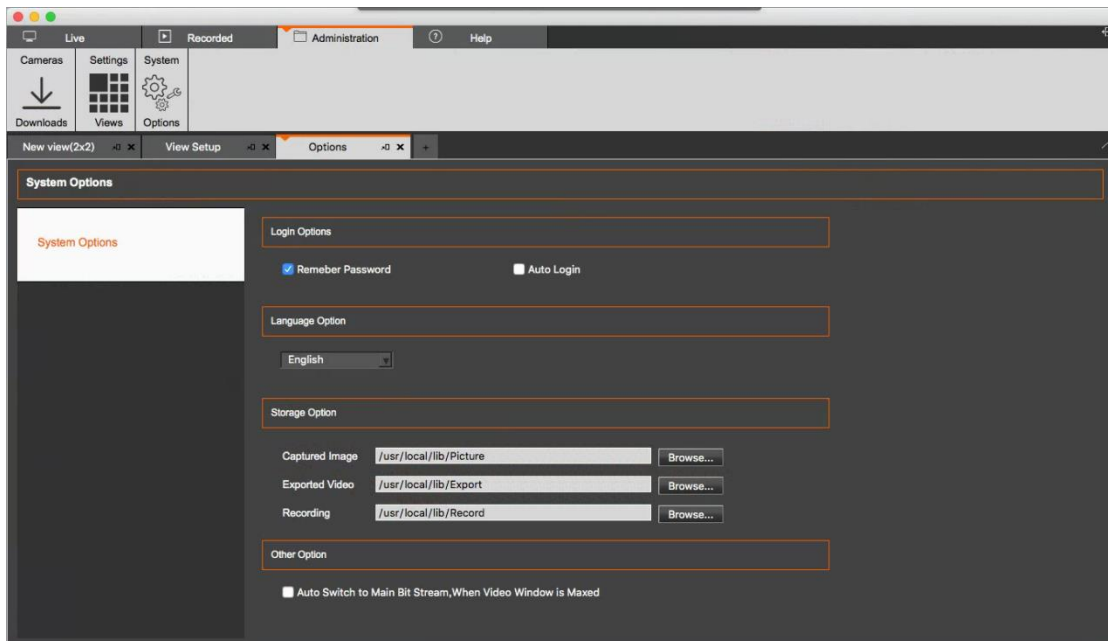


Login Options: You can set whether to remember the password, whether automatic landing

Language options: Set the system language

Storage Options: Set the capture, video recording and video export path

Other: Set whether to automatically maximize the window as the primary stream playback

 2.2.5 Logout

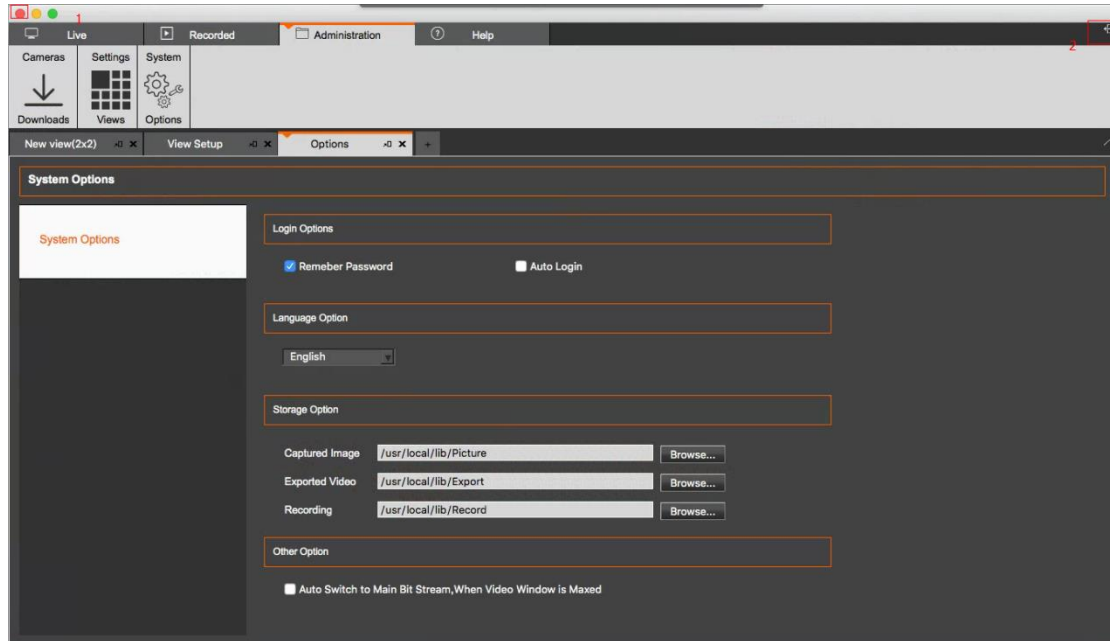

1. Quit System
2. Log out of the system